

Instruction & Maintenance



EXPANDABLE



Instruction & Maintenance


Activation 1 - 10

Press and hold




Activation 11 - 20

Press and hold

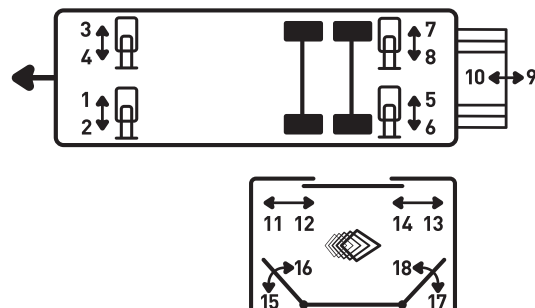


Expandable E03


Lubricate horizontal
Top and bottom surfaces Of
sliding beams
PTFE only!

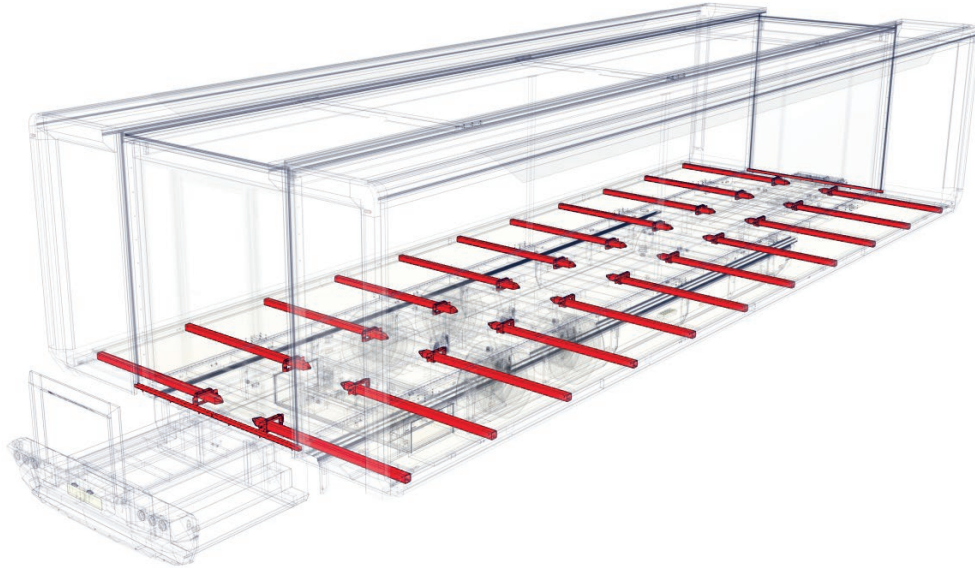



Maintenance Parts

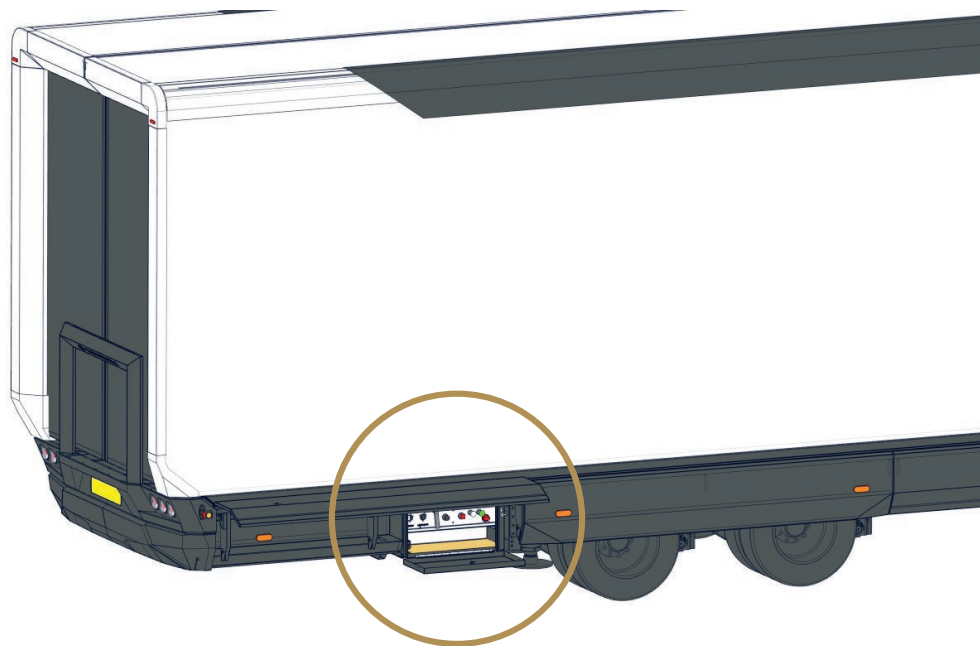

Controlbox


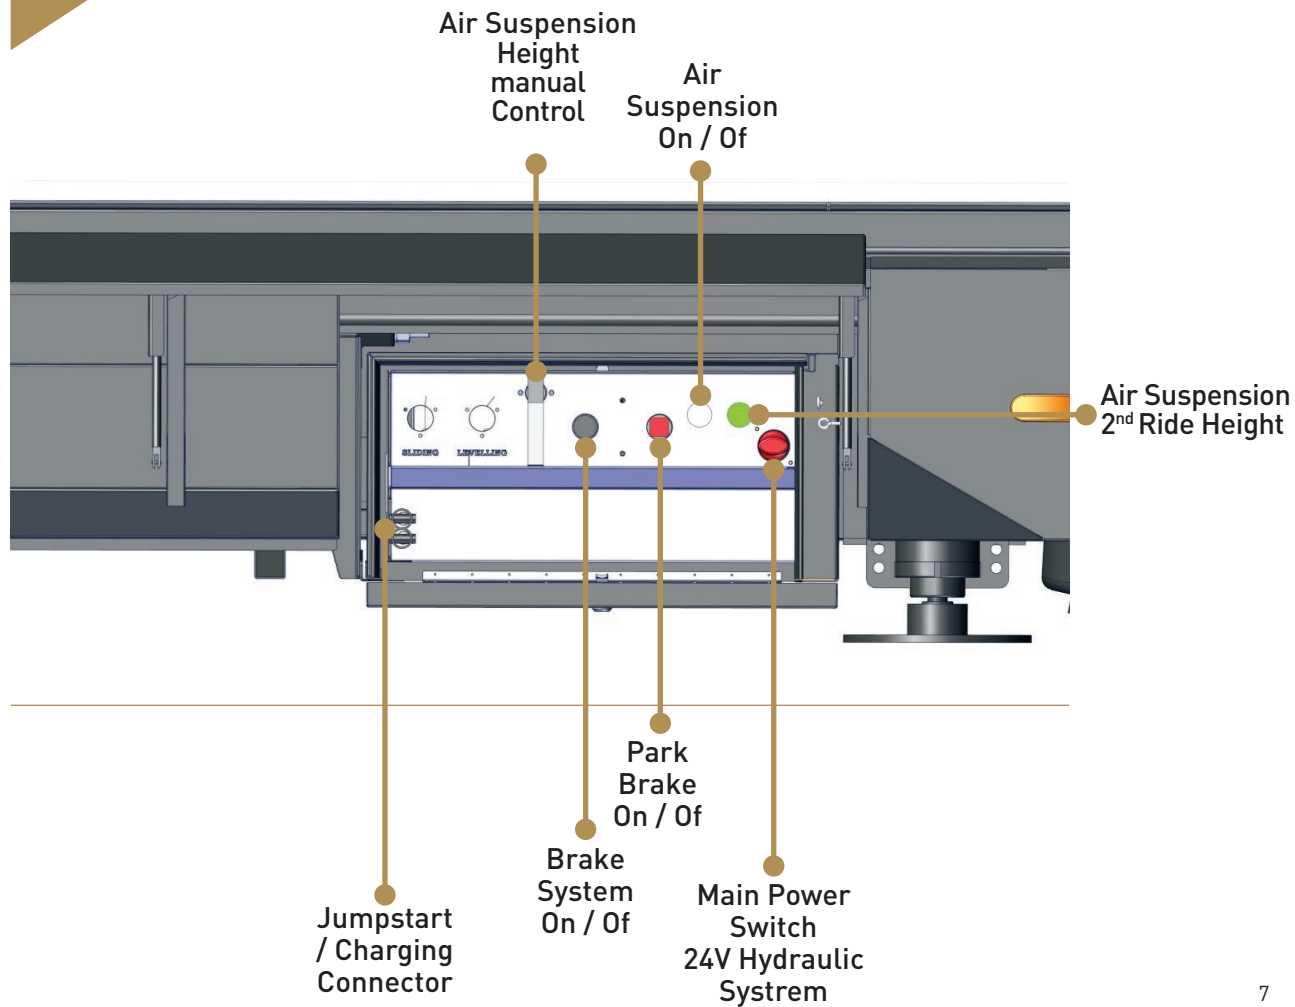


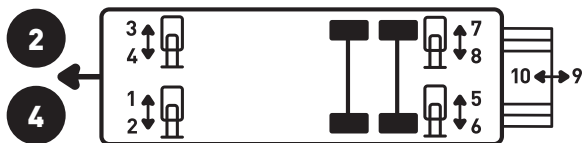

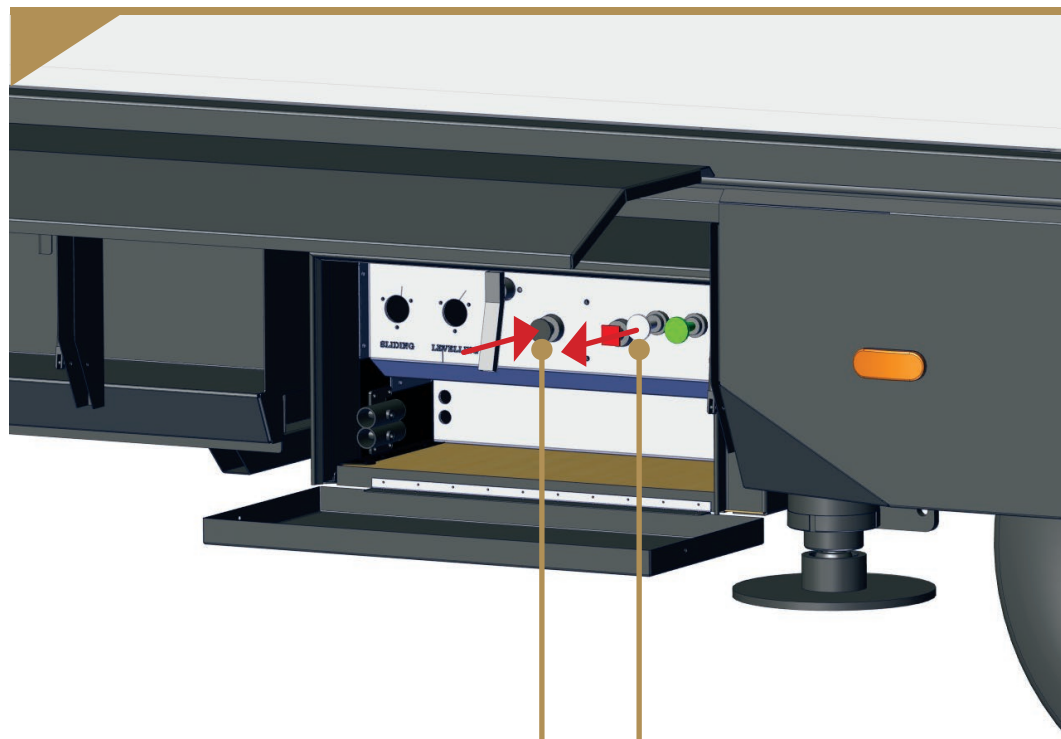

Brake off
Push black button


Air Suspension down
Pull white button

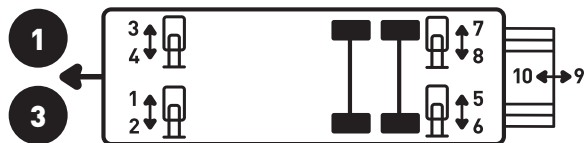
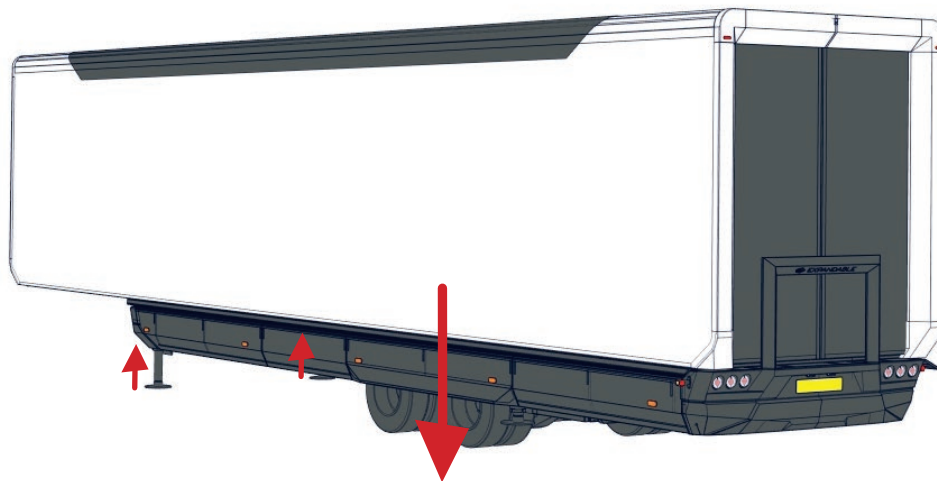







2 up to


8

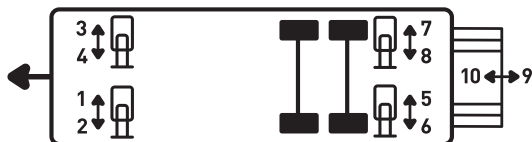

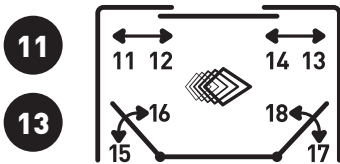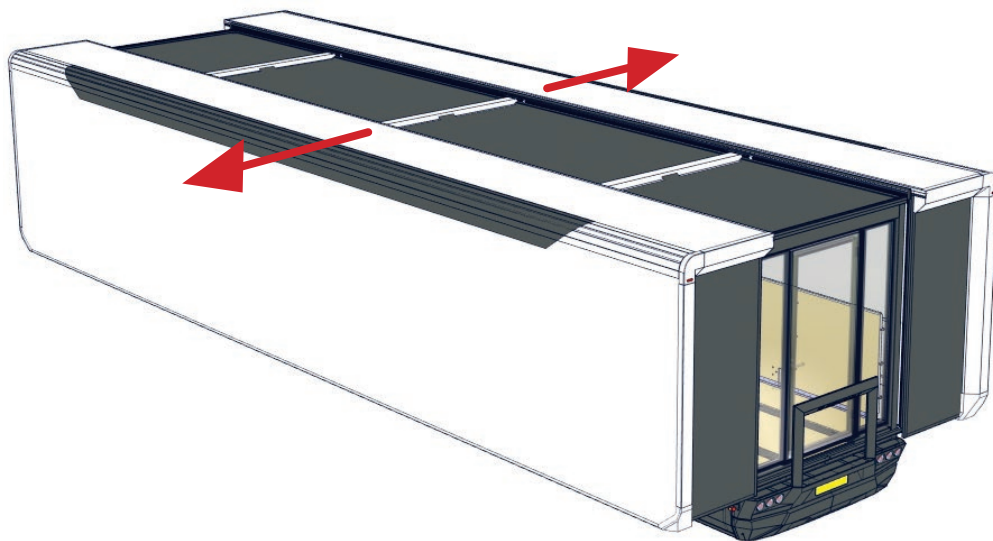


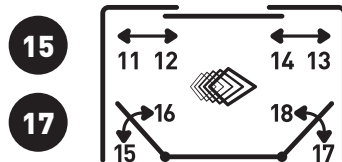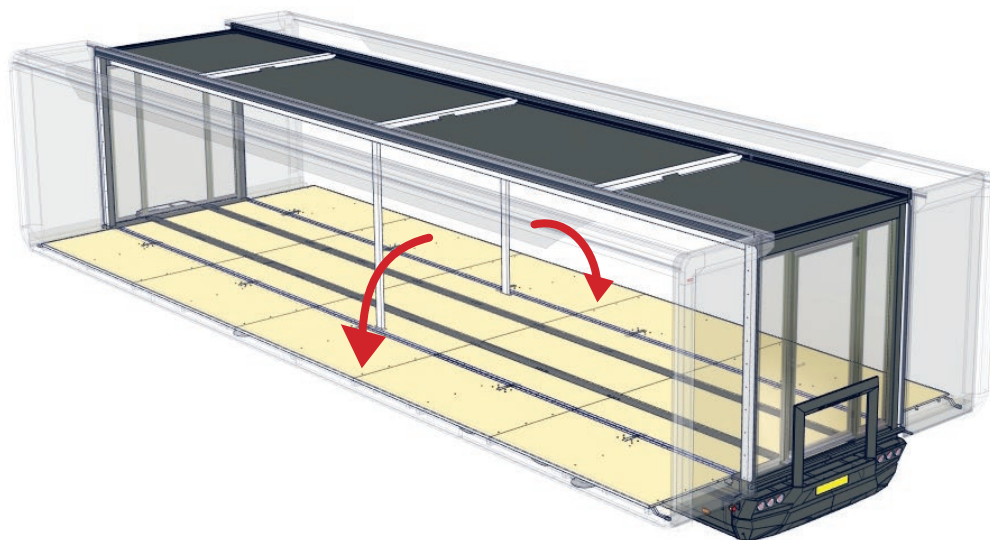


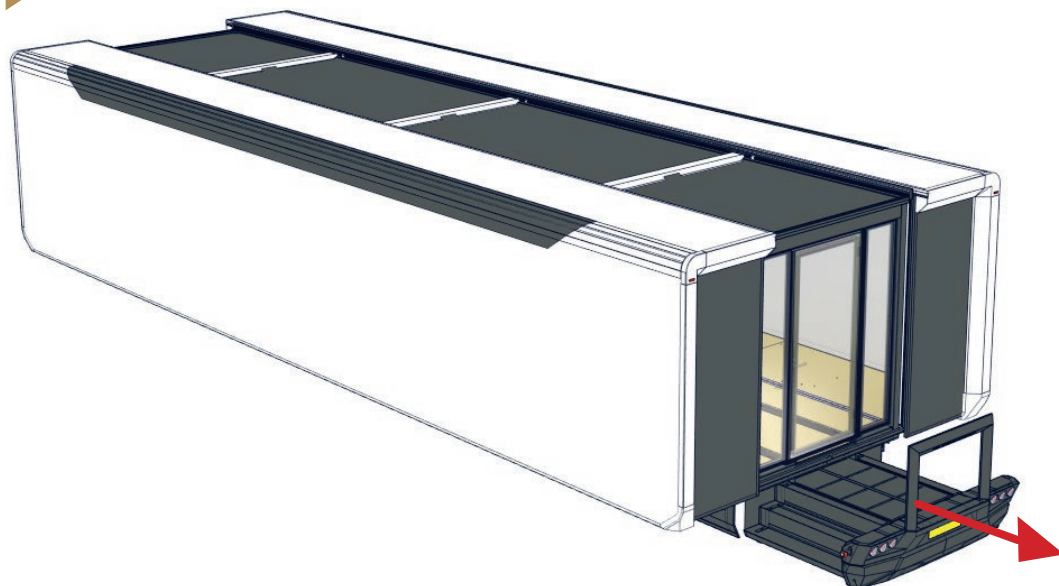

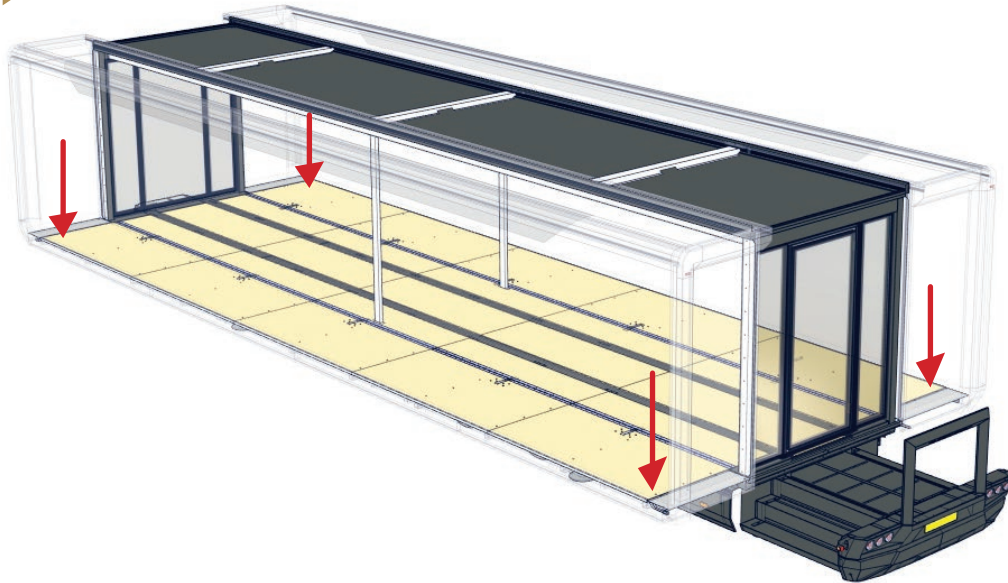

Manually place corner floor parts (4x)


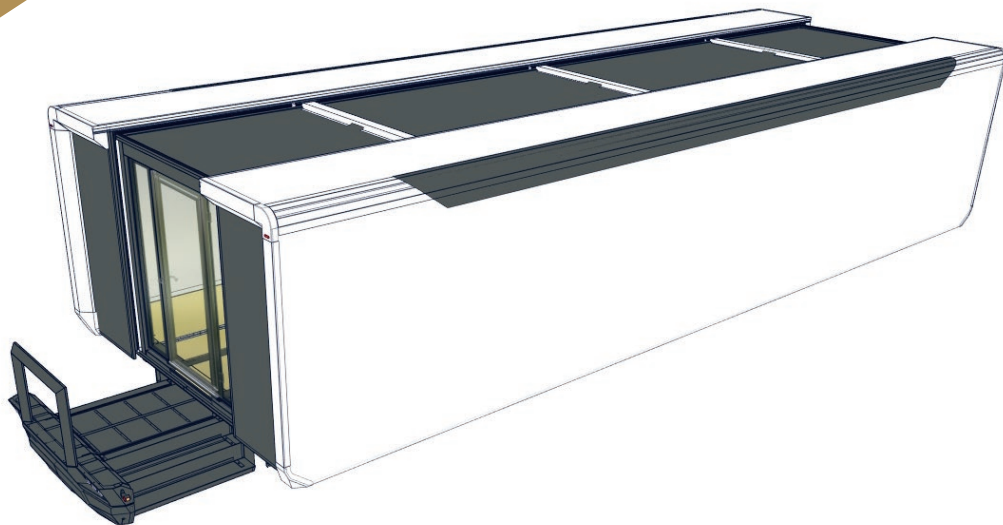



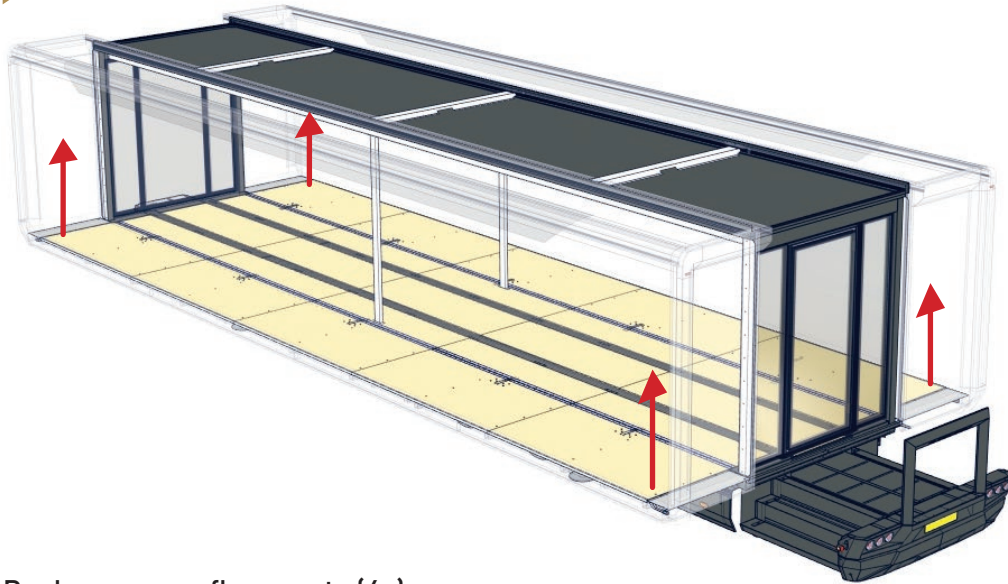



Replace corner floor parts (4x)


PREPARATION FOR TRANSPORT

- Make sure segment floors can rotate without obstruction
- Secure freight on central fixed floor
- Close and lock all doors

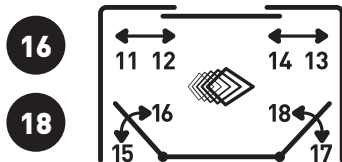
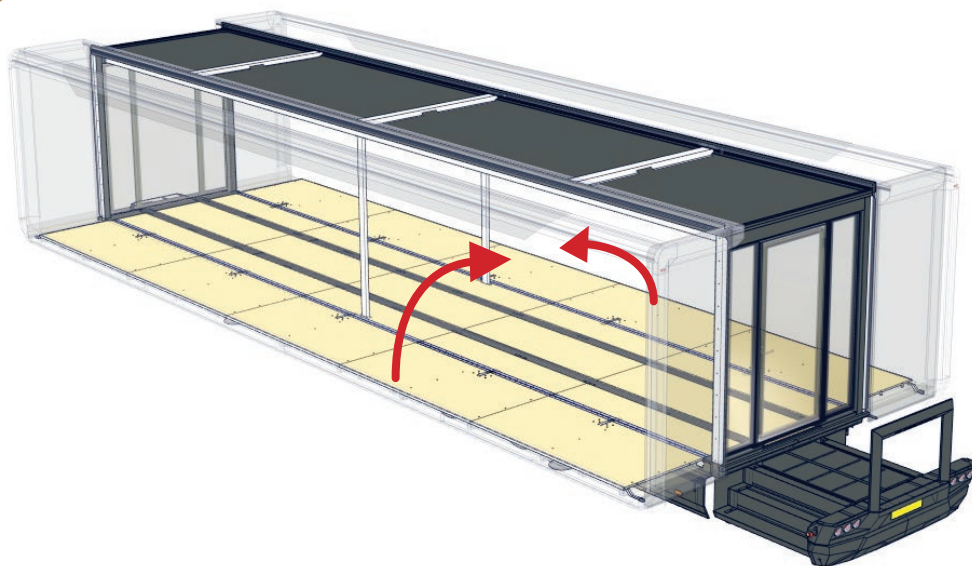


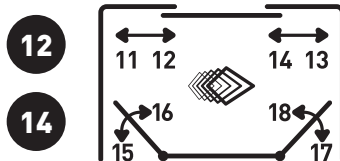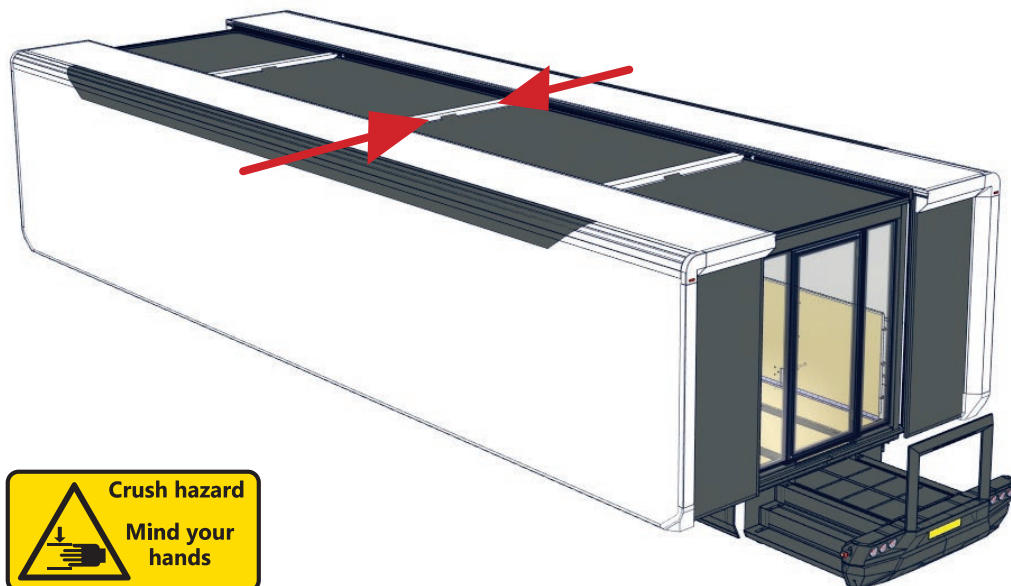

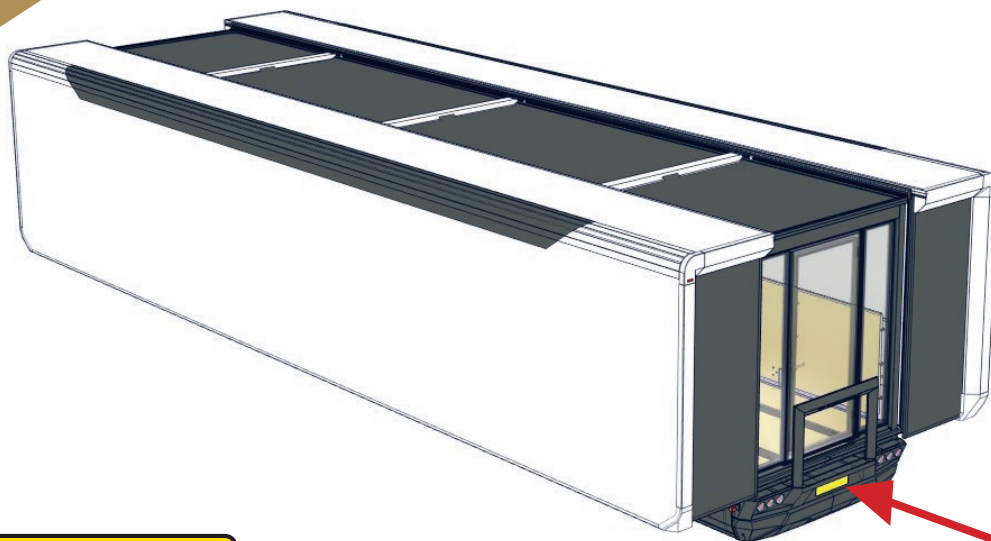

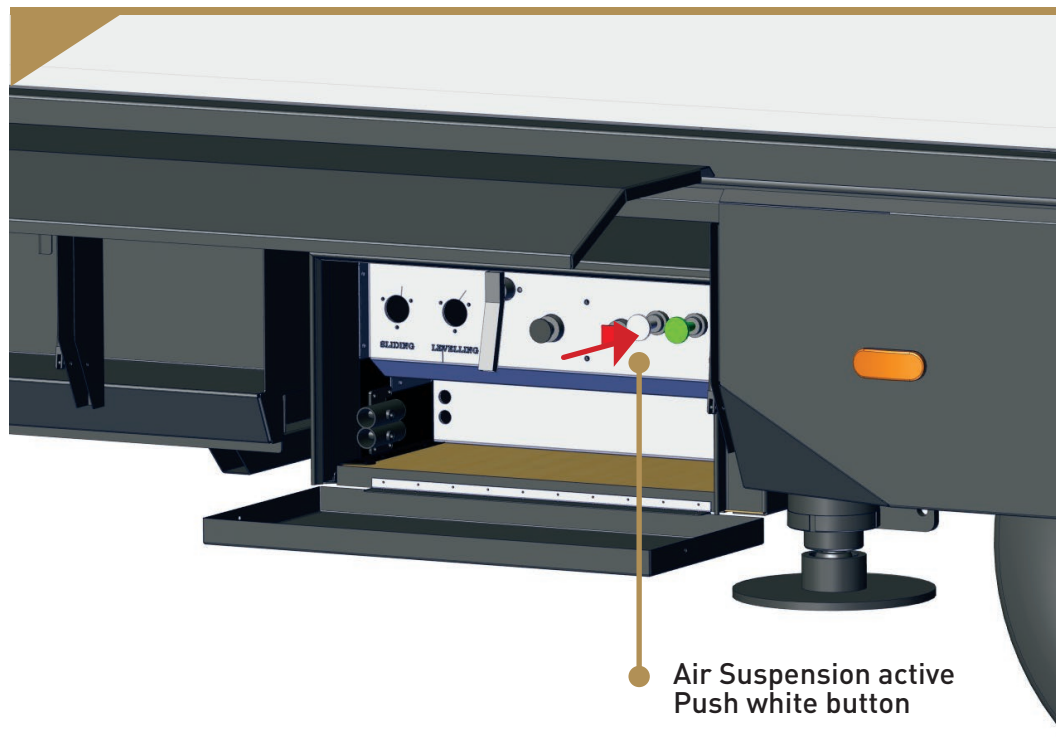

Connect Air Supply Truck if needed

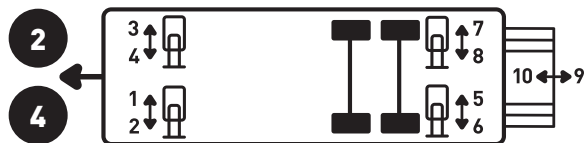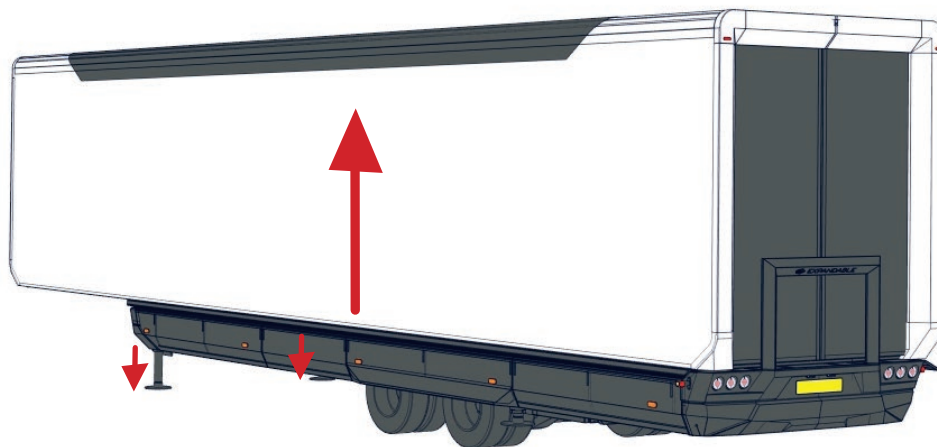





EXPANDABLE