

Instruction & Maintenance



EXPANDABLE
movable spaces



Instruction & Maintenance



Activation 1 - 14


Press

START + 1


Activation 15 - 28

Press

START + 2

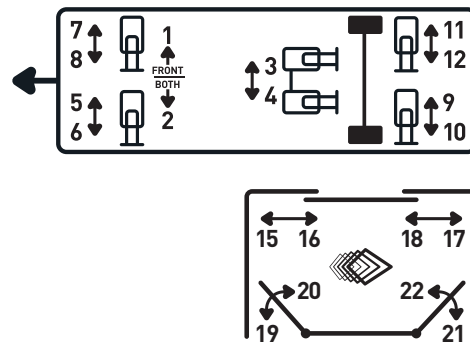

Expandable EOH3

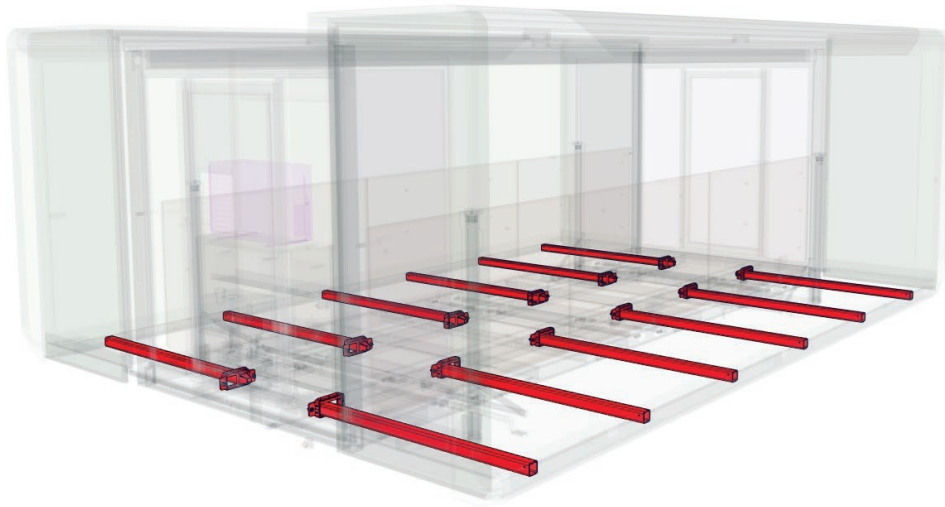

Maintenance Parts


Lubricate horizontal top and bottom surfaces of sliding beams PTFE only!




Positioning trailer



Raise airsuspension truck

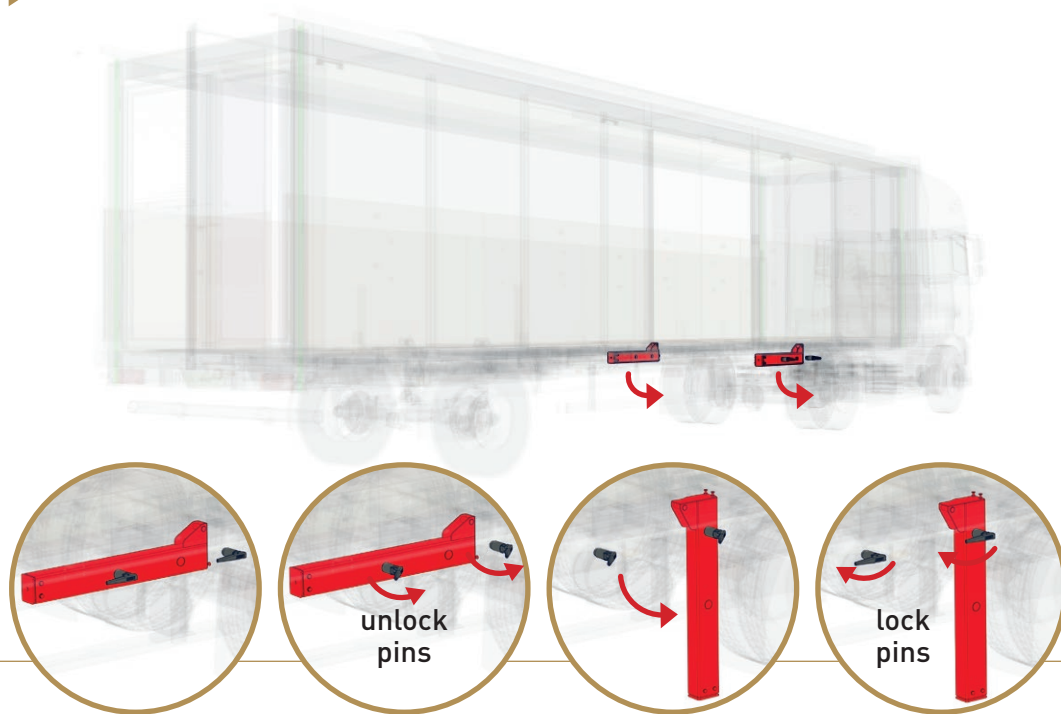

Flip support legs down

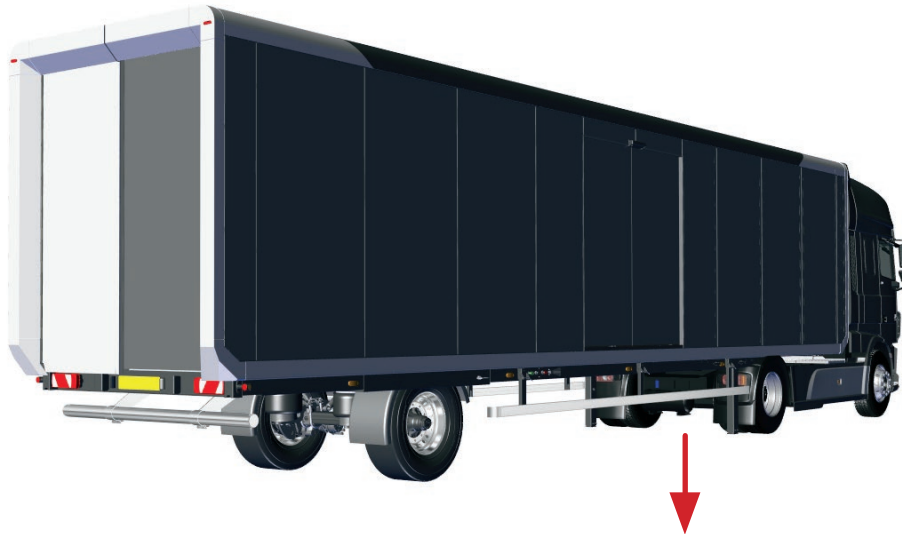

Lower airsuspension truck





Release kingpin and drive away



Lower front hydraulic legs

8 + **6** + **2**

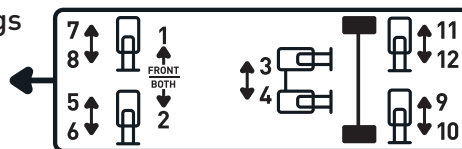

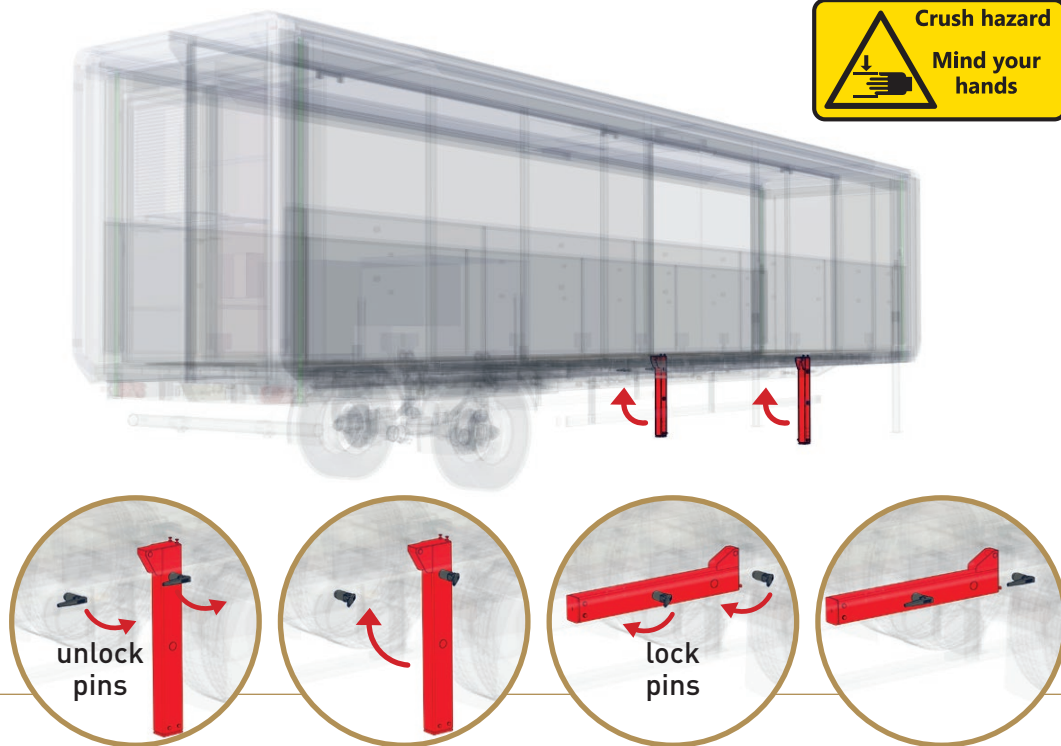




Flip side skirt up



Lift bumper




Release break
Push black button

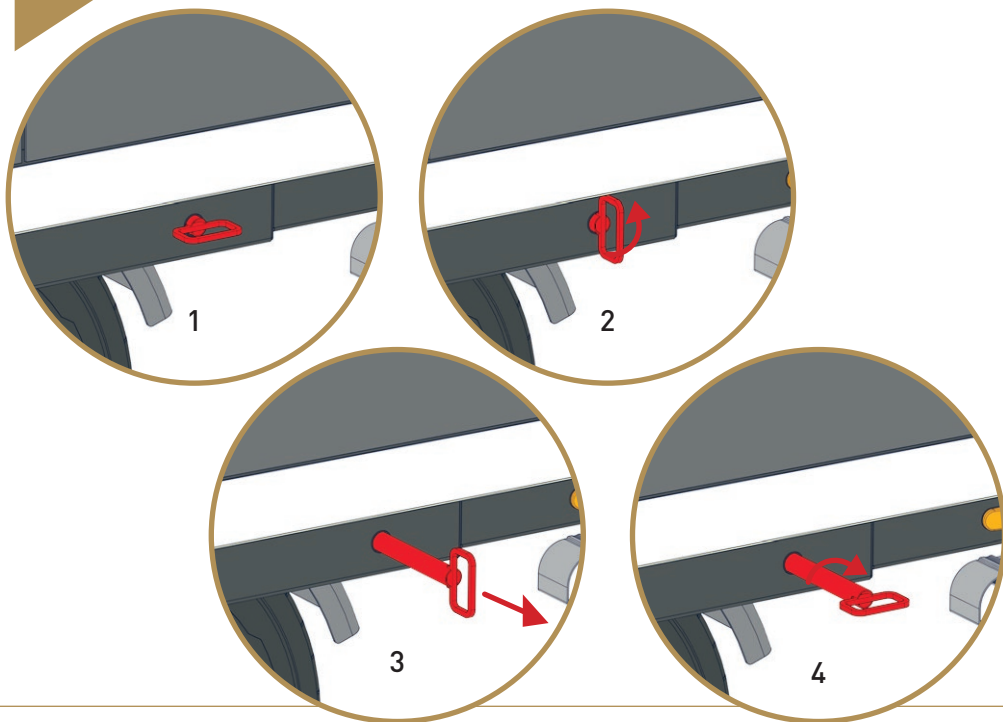

Release axle locking pins left and right





Lower trailer

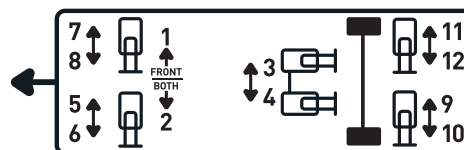




Level trailer

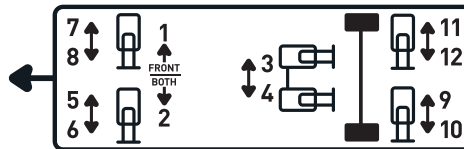


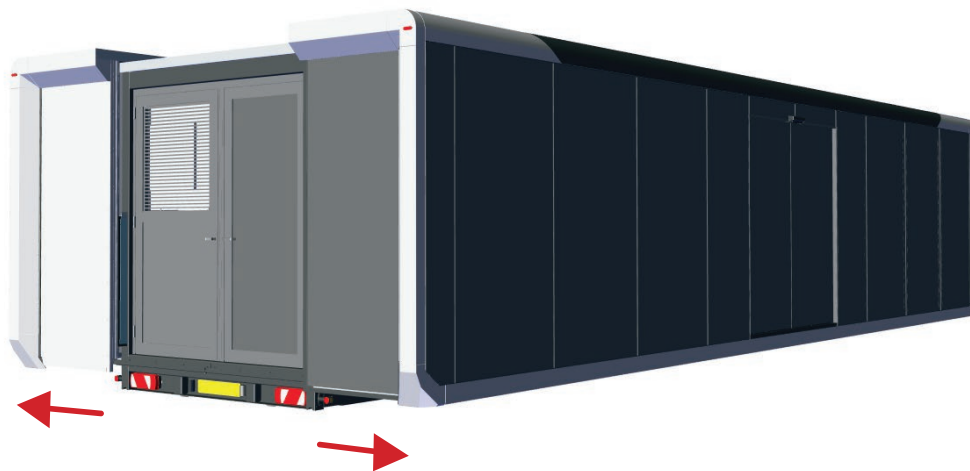

Slide out segments


15 + **17**

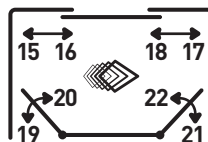

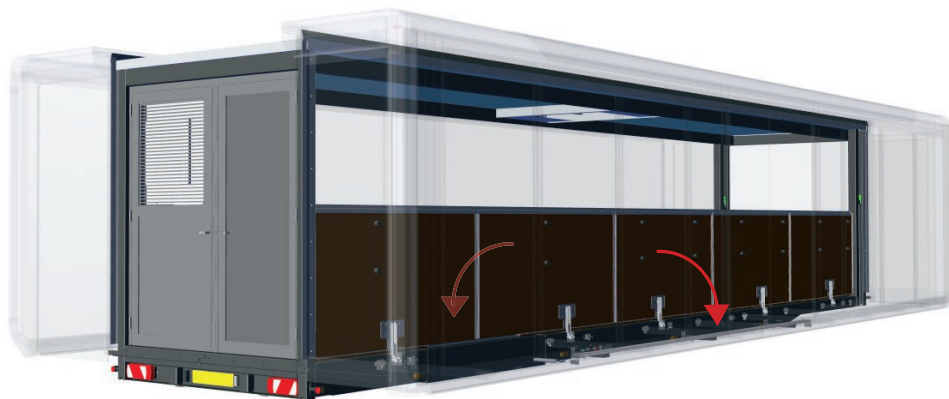

Lower hydraulic floors

19 + **21**

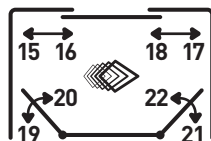




Manually place corner floor parts

PREPARATION FOR TRANSPORT

- Make sure segment floors can rotate without obstruction
- Secure freight on central fixed floor




Manually remove corner floor parts

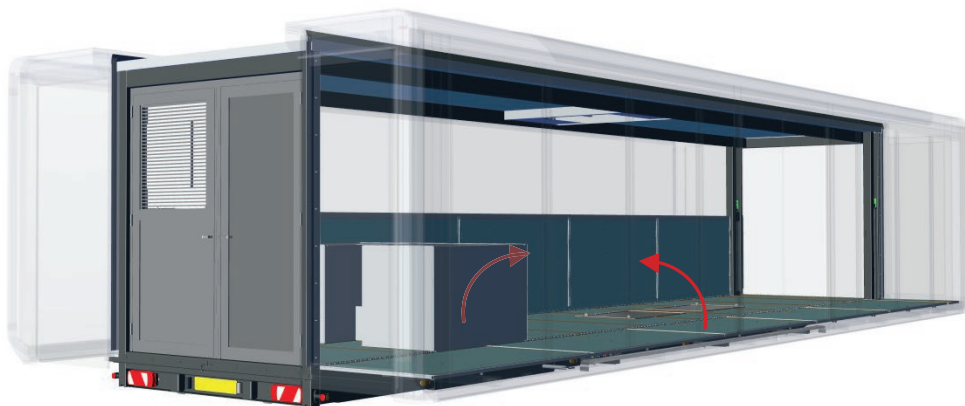


Raise hydraulic floors

20 + **22**

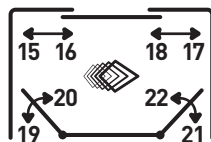


Check
clearance


EXPANDABLE

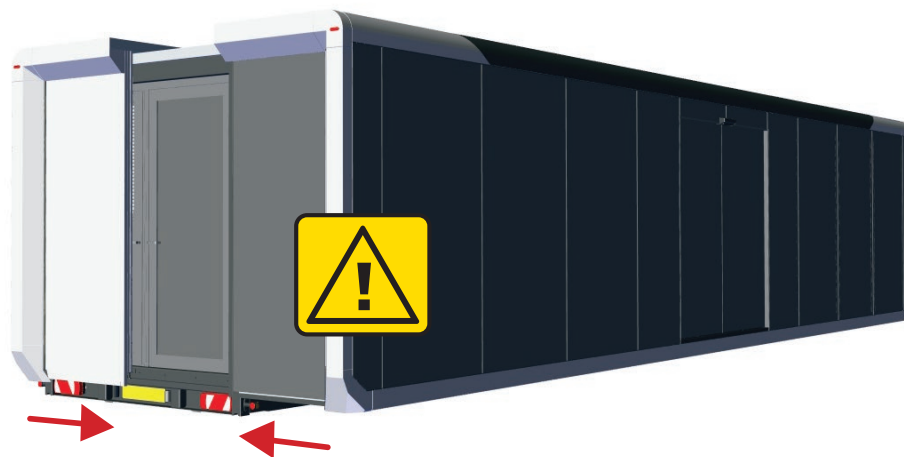


Slide in segments


16 + **18**

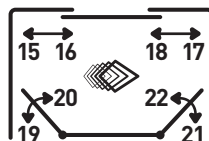

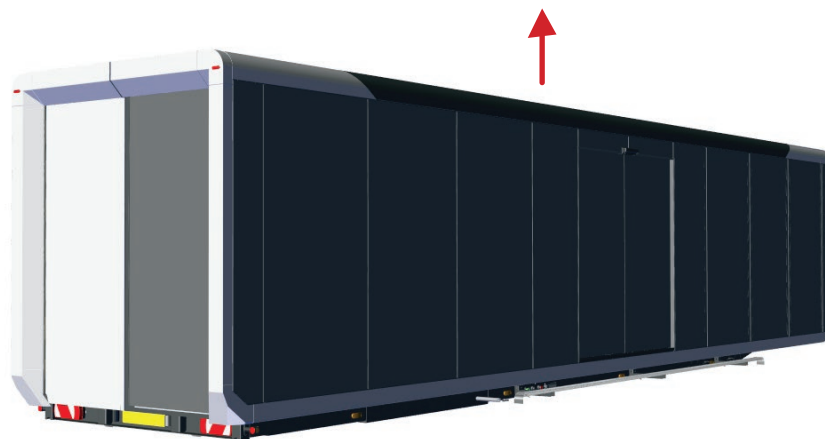

Lift trailer

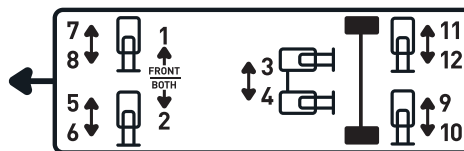

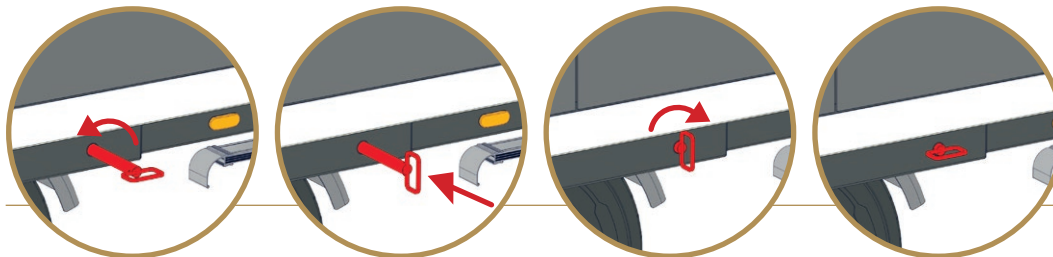

Lock axle locking pins left and right




Lower and lock support legs



Lower bumper



Lift front hydraulic legs

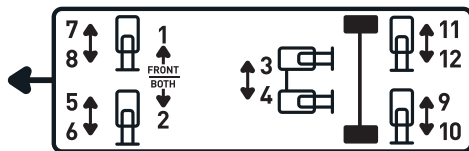



Lower side skirts



Activate break system
Pull out black button



Position truck with lowered air suspension



Lock kingpin and raise air suspension truck



Ready

Lift and lock support legs



EXPANDABLE