

General self unloading container

Transport handling after overseas imports

EA1360

Release: 05-2023


Table of contents

1. Unloading from the platform	1
1.1 Main switch "ON"	2
1.2 Lifting the container	3
1.3 Extending support legs	4
1.4 Retracting the level cylinders	5
1.5 Removing the platform	6
2. Loading	7
2.1 Truck combination positioning	8
2.2 Lifting the container (1st stage)	9
2.3 Lifting the container (2nd stage)	10
2.4 Retracting the support legs	11
2.5 Lowering the container	12
2.6 Fastening the container	13
2.7 Main switch off	14
3. Unloading from the semi-trailer	15
3.1 Releasing the twist locks	16
3.2 Main switch "ON"	17
3.3 Lifting the container (1st stage)	18
3.4 Lifting the container (2nd stage)	19
3.5 Unfolding the support legs	20
3.6 Retracting the level cylinders	21
3.7 Truck combination removal	22
3.8 Extending the level cylinders	23
3.9 Lifting the container (2nd stage)	24
3.10 Fold down support legs	25
3.11 Lowering the container	26
4. Leveling the container	27
4.1 Extending the level cylinders	28
4.2 Container leveling	29
4.3 Sliding out auxiliary cylinder piston rods	30

1. Unloading from the platform




1.1 Main switch "ON"

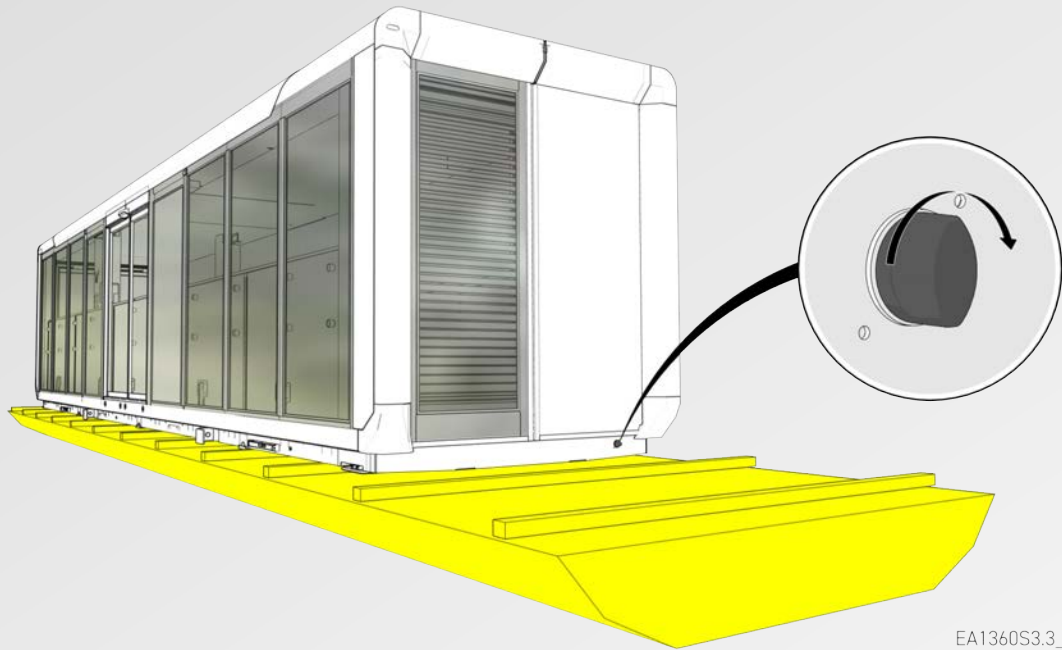

EA1360S3.3_39

1. Turn the main switch clockwise to the "ON" position.

1.2 Lifting the container

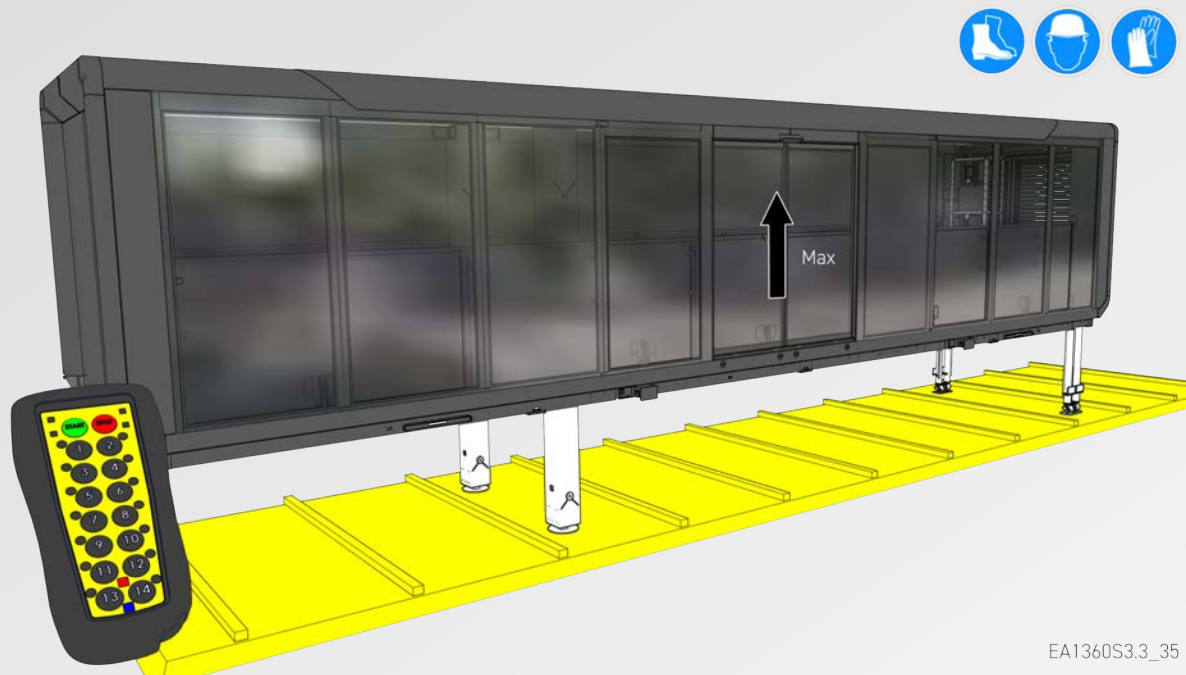

Operating level cylinders separately

- Key 1 → FL container up
- Key 2 → FL container down
- Key 3 → FR container up
- Key 4 → FR container down
- Key 5 → RL container up
- Key 6 → RL container down
- Key 7 → RR container up
- Key 8 → RR container down
- Key 9 → Container up
- Key 10 → Container down

1. Lift the container to the highest vertical position by pressing and holding key 9 on the remote control. (Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container



Always keep the container as level as possible. Correct using the keys 1 to 8

1.3 Extending support legs



1. Unfold and secure the 4 support legs one by one.

1.4 Retracting the level cylinders



Operating level cylinders separately

- Key 1 → FL level cylinder down
- Key 2 → FL level cylinder up
- Key 3 → FR level cylinder down
- Key 4 → FR level cylinder up
- Key 5 → RL level cylinder down
- Key 6 → RL level cylinder up
- Key 7 → RR level cylinder down
- Key 8 → RR level cylinder up
- Key 9 → All level cylinders down
- Key 10 → All level cylinders up

1. Retract all level cylinders by pressing and holding button 10 on the remote control.
(Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container

1.5 Removing the platform



EA1360S3.3_38

1. Remove the platform from under the container.




Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container

2. Continue positioning the truck combination ([see "Truck combination positioning on page 8"](#)).

2. Loading



2.1 Truck combination positioning

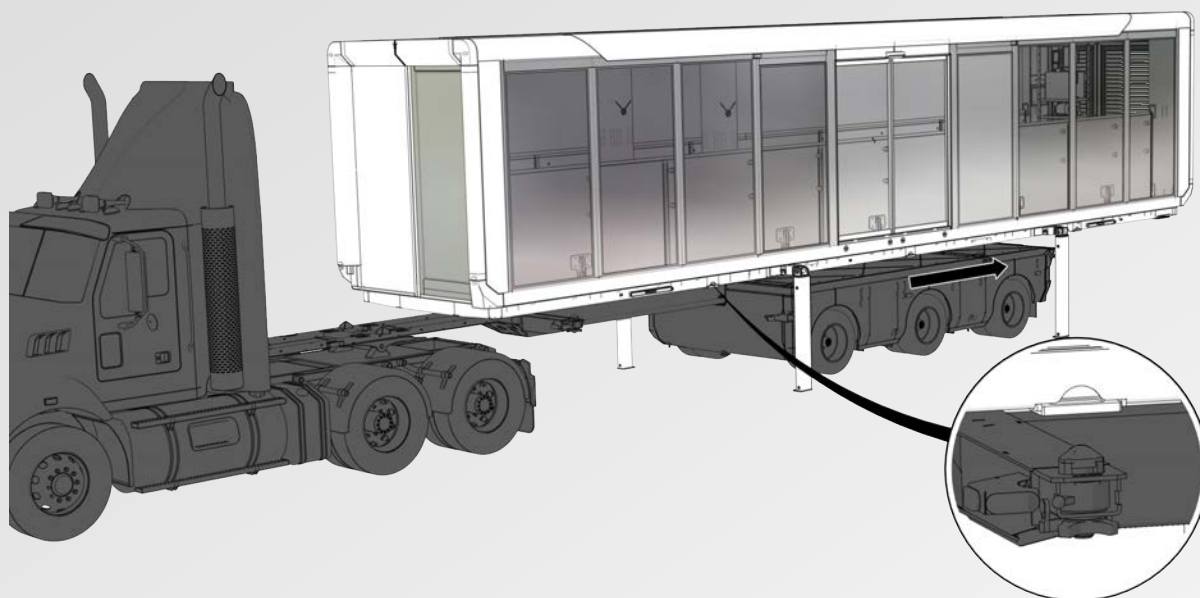

EA1360S3.3_04

1. Drive the trailer under the container and make sure the twist locks are in line with the container's clamping positions.




Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container.



Drive the trailer in a straight line under the container.

2.2 Lifting the container (1st stage)

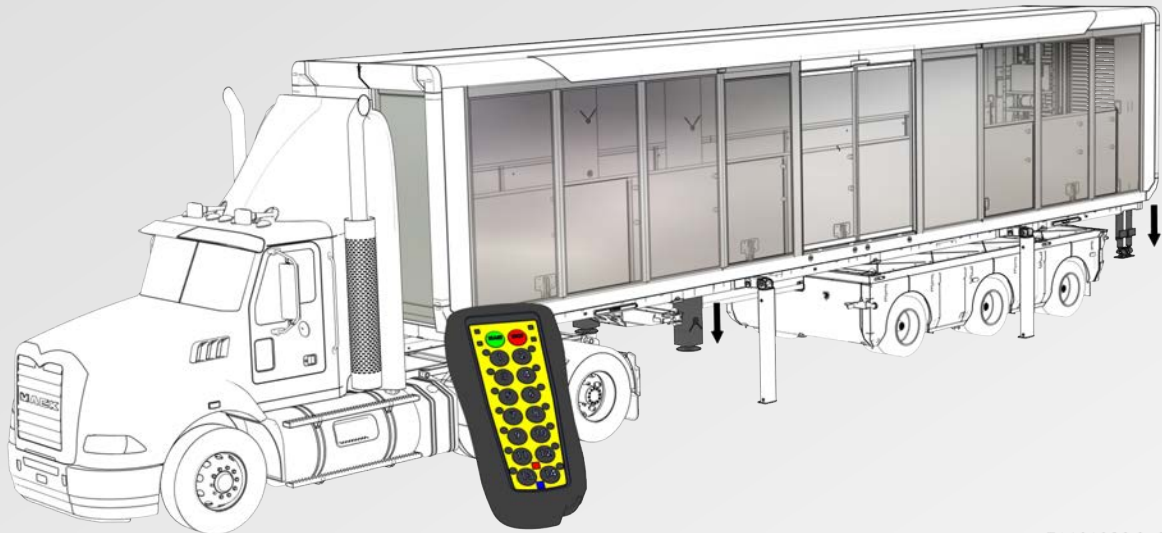

EA1360S3.3_05

Operating level cylinders separately


- Key 1 → FL level cylinder down
- Key 2 → FL level cylinder up
- Key 3 → FR level cylinder down
- Key 4 → FR level cylinder up
- Key 5 → RL level cylinder down
- Key 6 → RL level cylinder up
- Key 7 → RR level cylinder down
- Key 8 → RR level cylinder up
- Key 9 → All level cylinders down
- Key 10 → All level cylinders up

1. Slide the level cylinders out until they touch the ground by pressing and holding key 9 on the remote control. (Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container

2.3 Lifting the container (2nd stage)

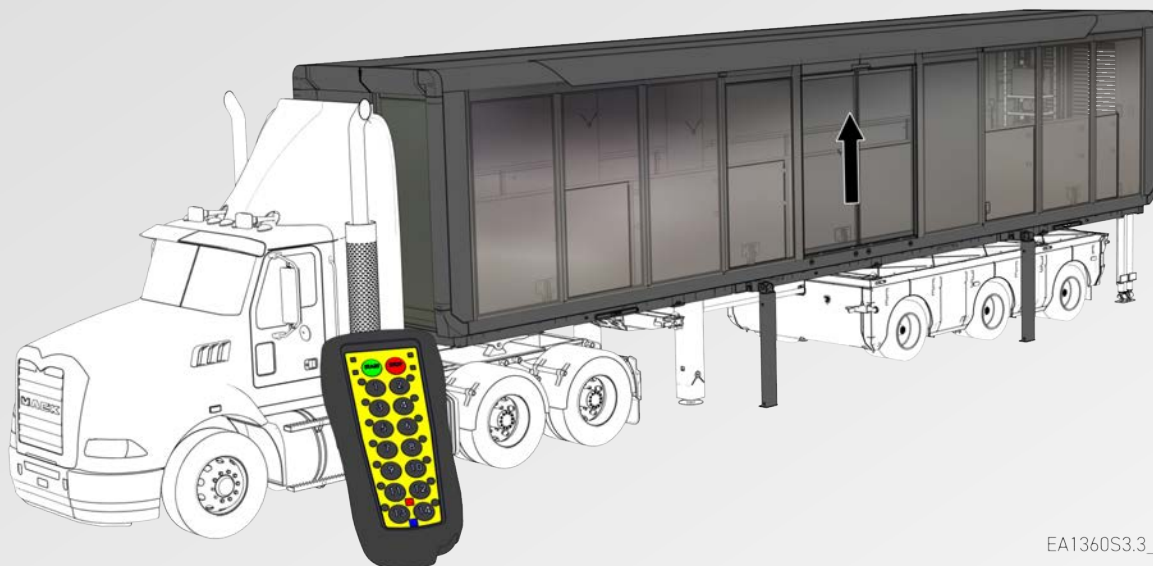

EA1360S3.3_06

Operating level cylinders separately

- Key 1 → FL container up
- Key 2 → FL container down
- Key 3 → FR container up
- Key 4 → FR container down
- Key 5 → RL container up
- Key 6 → RL container down
- Key 7 → RR container up
- Key 8 → RR container down
- Key 9 → Container up
- Key 10 → Container down

1. Lift the container to its highest vertical position by pressing and holding key **9** on the remote control.
(Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).




Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container




**Always keep the container as level as possible.
Correct using the keys **1** to **8****

2.4 Retracting the support legs

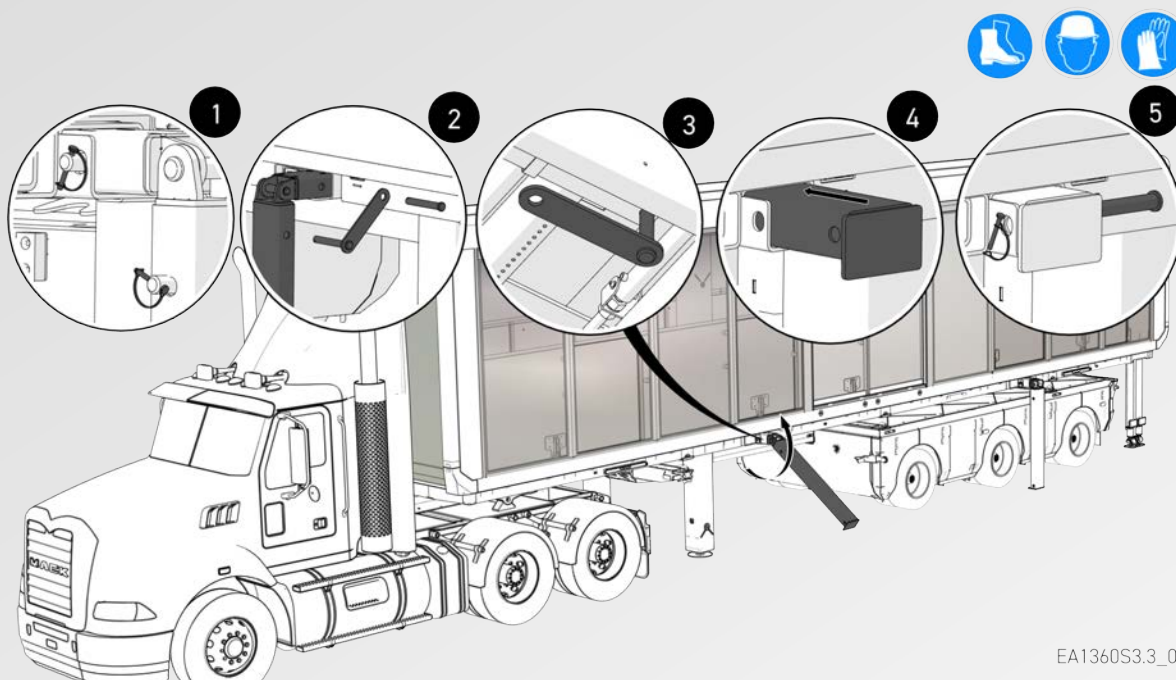

1. Fold, slide in and secure the 4 support legs one by one.

2.5 Lowering the container

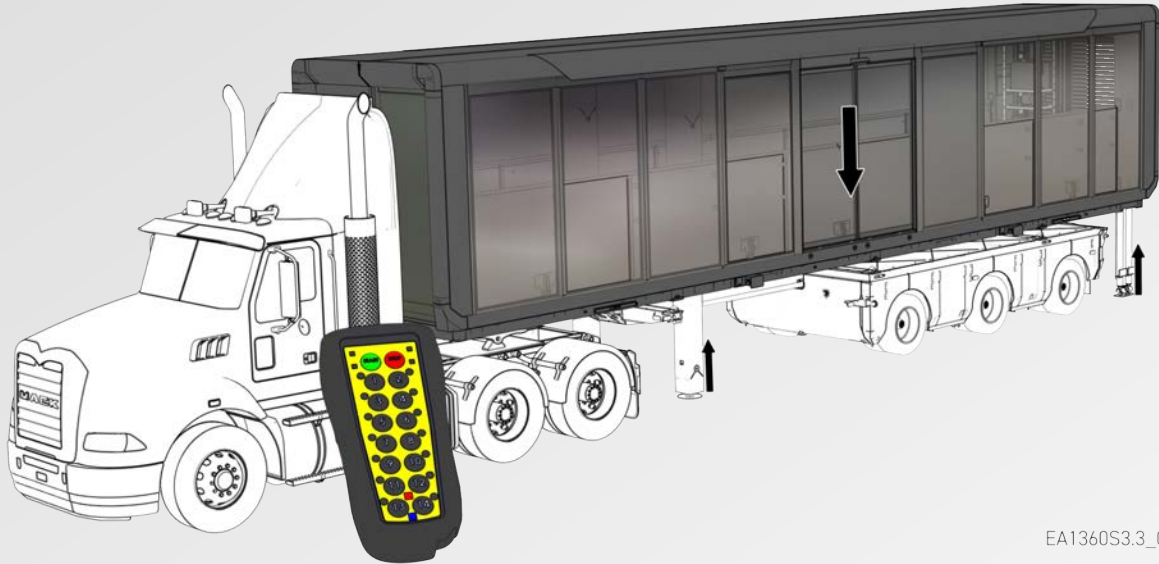

EA1360S3.3_08

Operating level cylinders separately



- Key 1 → FL container up
- Key 2 → FL container down
- Key 3 → FR container up
- Key 4 → FR container down
- Key 5 → RL container up
- Key 6 → RL container down
- Key 7 → RR container up
- Key 8 → RR container down
- Key 9 → Container up
- Key 10 → Container down

1. Lower the container onto the trailer by pressing and holding key 10 on the remote control.
(Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).




Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container

2.6 Fastening the container

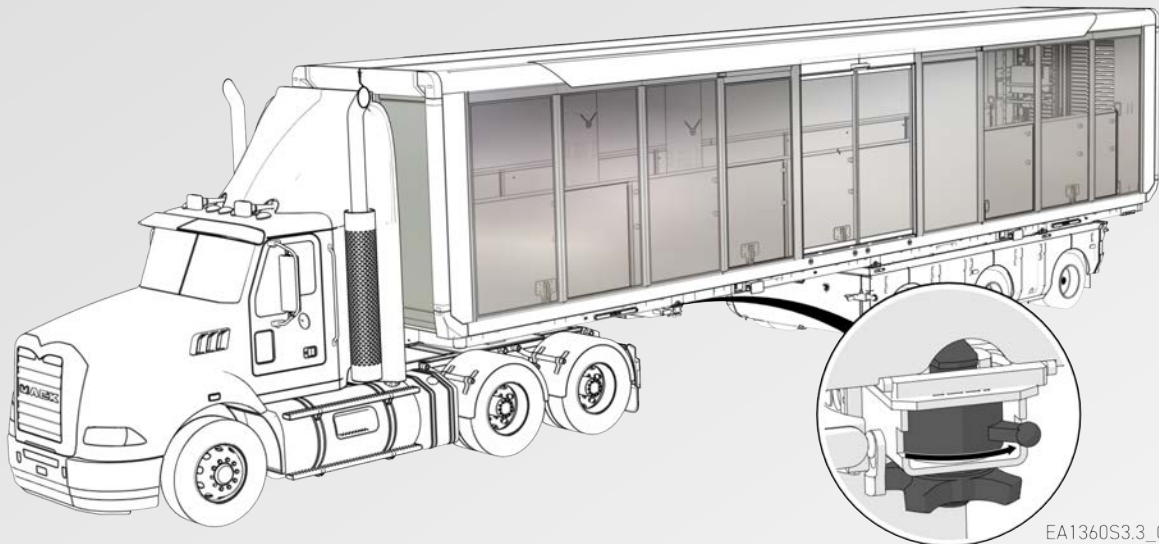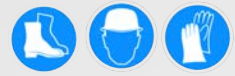

1. Fasten the container onto the trailer using the twist locks.

2.7 Main switch off

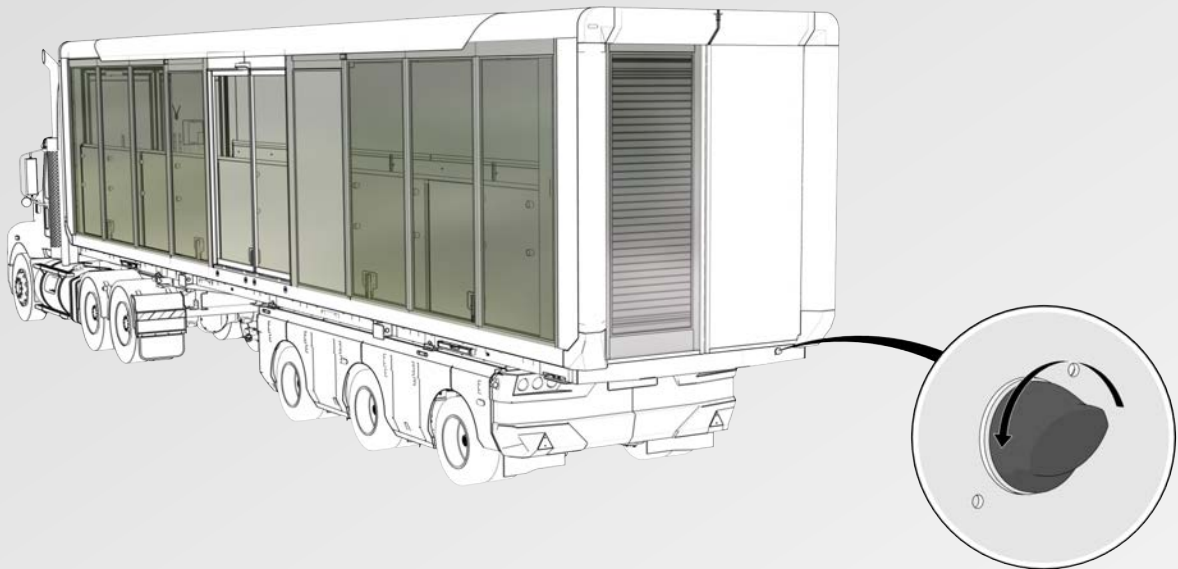


EA1360S3.3_40

1. Switch the main switch counter clockwise to "OFF".
2. The Expandable container is ready for the road trip.

3. Unloading from the semi-trailer




3.1 Releasing the twist locks

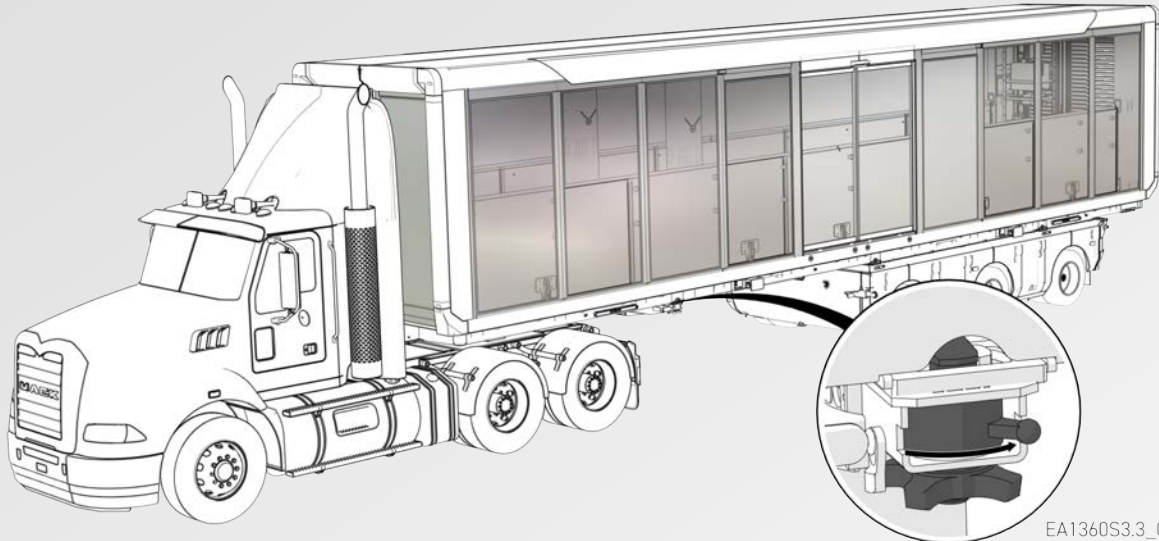

1. Release all twist locks.


3.2 Main switch "ON"

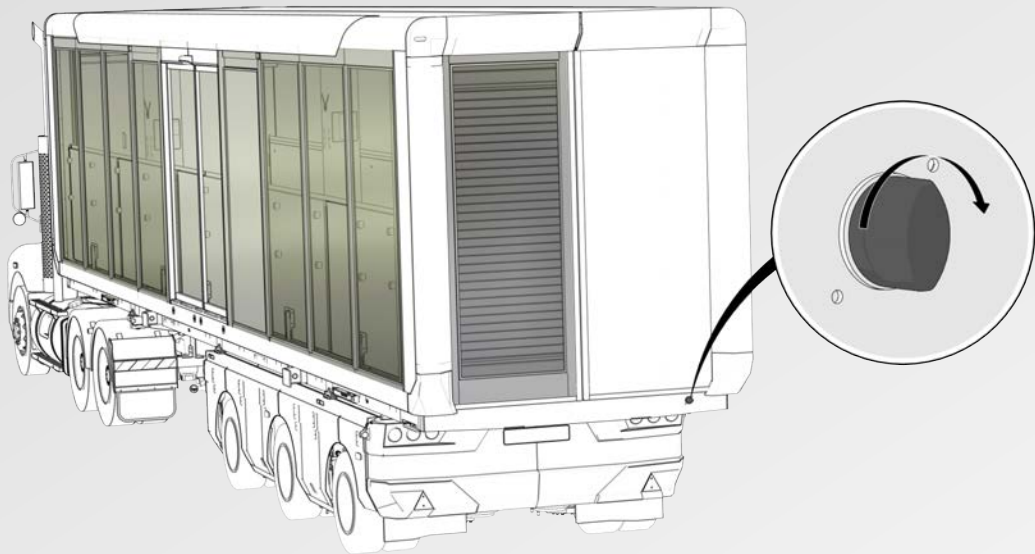

EA1360S3.3_42

1. Turn the main switch clockwise to the "ON" position.

3.3 Lifting the container (1st stage)

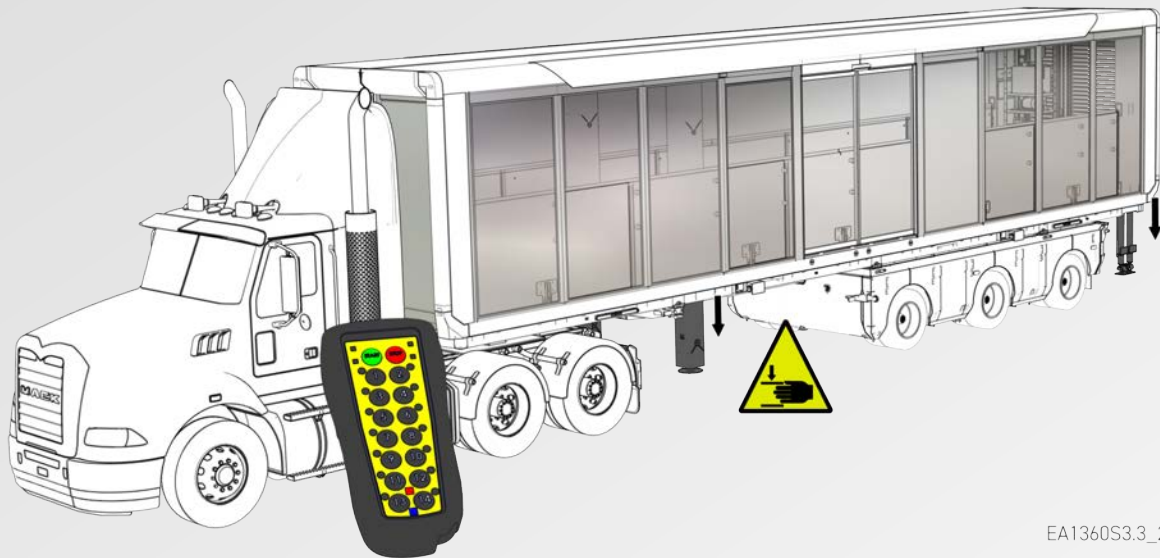

EA1360S3.3_27

Operating level cylinders separately


- Key 1 → FL level cylinder down
- Key 2 → FL level cylinder up
- Key 3 → FR level cylinder down
- Key 4 → FR level cylinder up
- Key 5 → RL level cylinder down
- Key 6 → RL level cylinder up
- Key 7 → RR level cylinder down
- Key 8 → RR level cylinder up
- Key 9 → All level cylinders down
- Key 10 → All level cylinders up

1. Slide the level cylinders out until they touch the ground by pressing and holding key 9 on the remote control. (Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container

3.4 Lifting the container (2nd stage)

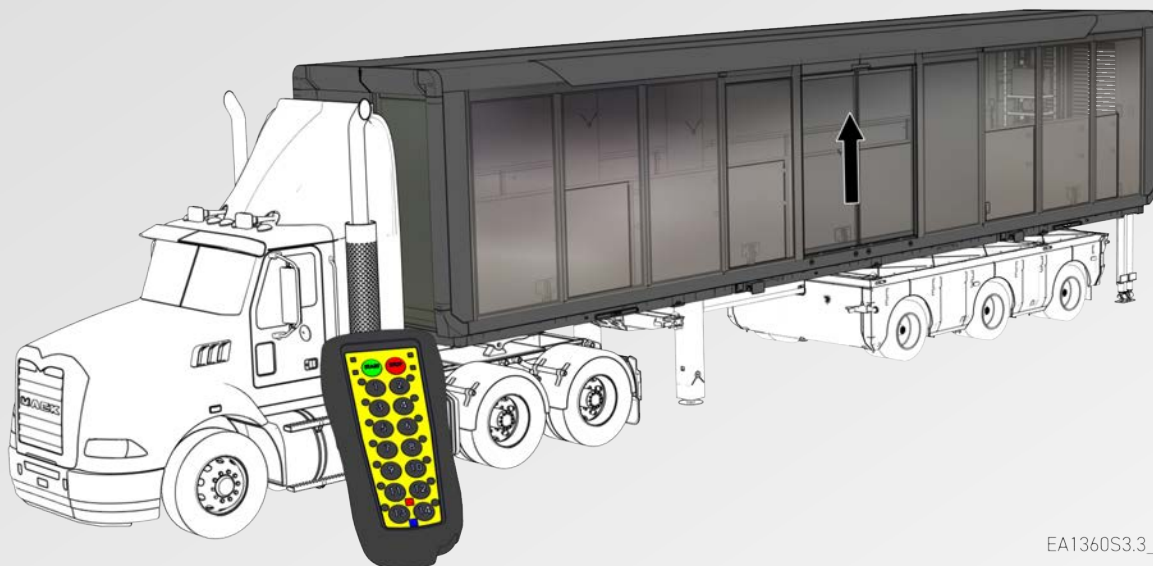

EA1360S3.3_28

Operating level cylinders separately

- Key 1 → FL container up
- Key 2 → FL container down
- Key 3 → FR container up
- Key 4 → FR container down
- Key 5 → RL container up
- Key 6 → RL container down
- Key 7 → RR container up
- Key 8 → RR container down
- Key 9 → Container up
- Key 10 → Container down

1. Lift the container to it's highest vertical position by pressing and holding key **9** on the remote control.
(Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).




Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container



**Always keep the container as level as possible.
Correct using the keys **1** to **8****

3.5 Unfolding the support legs

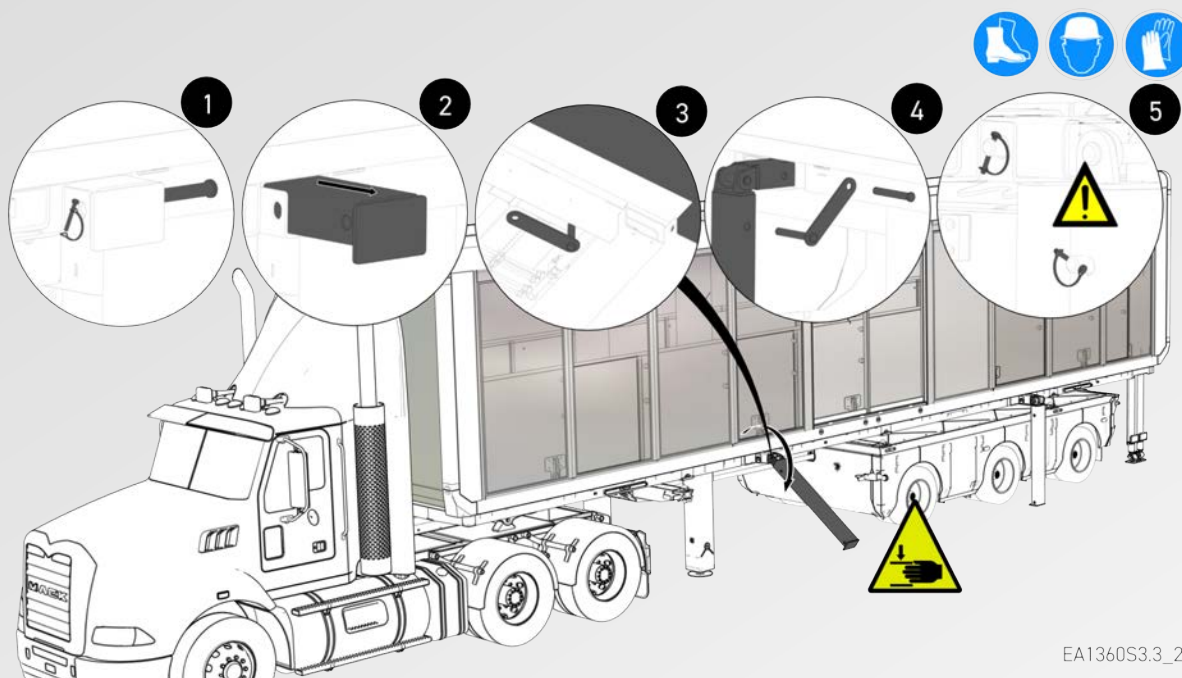


1. Unfold and lock the 4 support legs one by one.



The locking brackets are stored under the chassis.

3.6 Retracting the level cylinders

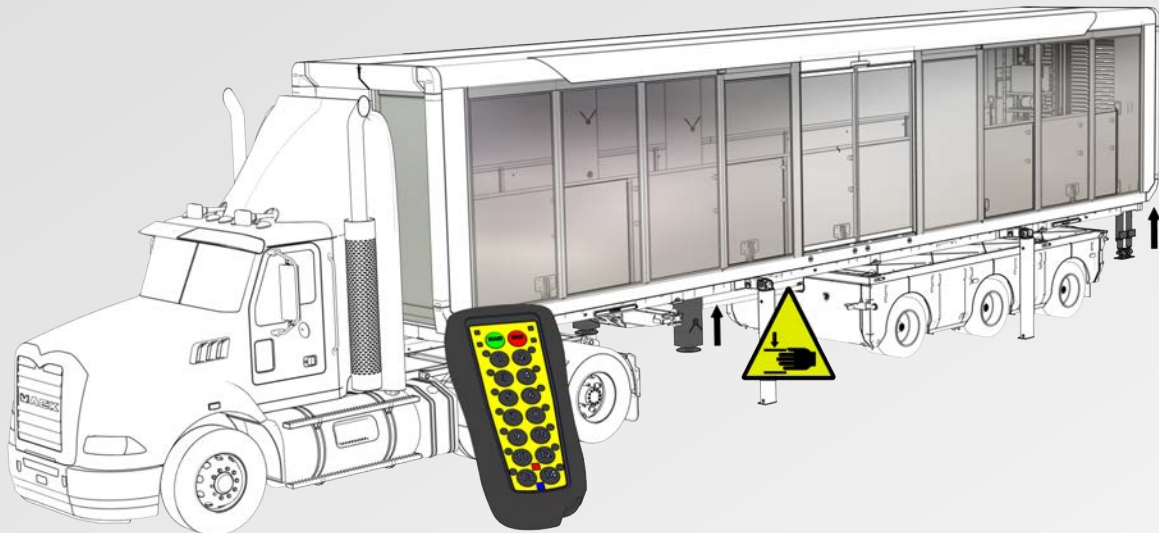

EA1360S3.3_30

Operating level cylinders separately

- Key 1 → FL level cylinder down
- Key 2 → FL level cylinder up
- Key 3 → FR level cylinder down
- Key 4 → FR level cylinder up
- Key 5 → RL level cylinder down
- Key 6 → RL level cylinder up
- Key 7 → RR level cylinder down
- Key 8 → RR level cylinder up
- Key 9 → All level cylinders down
- Key 10 → All level cylinders up

1. Retract all level cylinders by pressing and holding key **10** on the remote control.
(Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container

3.7 Truck combination removal



EA1360S3.3_31

1. Drive the truck combination out from under the container.



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container.



Drive the trailer in a straight line.

3.8 Extending the level cylinders



Operating level cylinders separately


- Key 1 → FL level cylinder down
- Key 2 → FL level cylinder up
- Key 3 → FR level cylinder down
- Key 4 → FR level cylinder up
- Key 5 → RL level cylinder down
- Key 6 → RL level cylinder up
- Key 7 → RR level cylinder down
- Key 8 → RR level cylinder up
- Key 9 → All level cylinders down
- Key 10 → All level cylinders up

1. Slide the level cylinders out until they touch the ground by pressing and holding key 9 on the remote control. (Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container

3.9 Lifting the container (2nd stage)

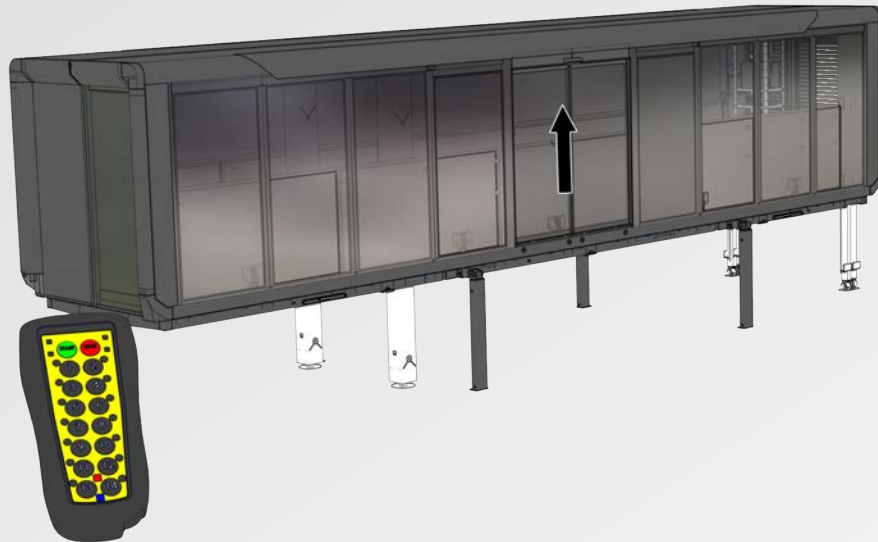

EA1360S3.3_41

Operating level cylinders separately

- Key 1 → FL container up
- Key 2 → FL container down
- Key 3 → FR container up
- Key 4 → FR container down
- Key 5 → RL container up
- Key 6 → RL container down
- Key 7 → RR container up
- Key 8 → RR container down
- Key 9 → Container up
- Key 10 → Container down

1. Lift the container to its highest vertical position by pressing and holding key **9** on the remote control.
(Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).




Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container



**Always keep the container as level as possible.
Correct using the keys **1** to **8****

3.10 Fold down support legs

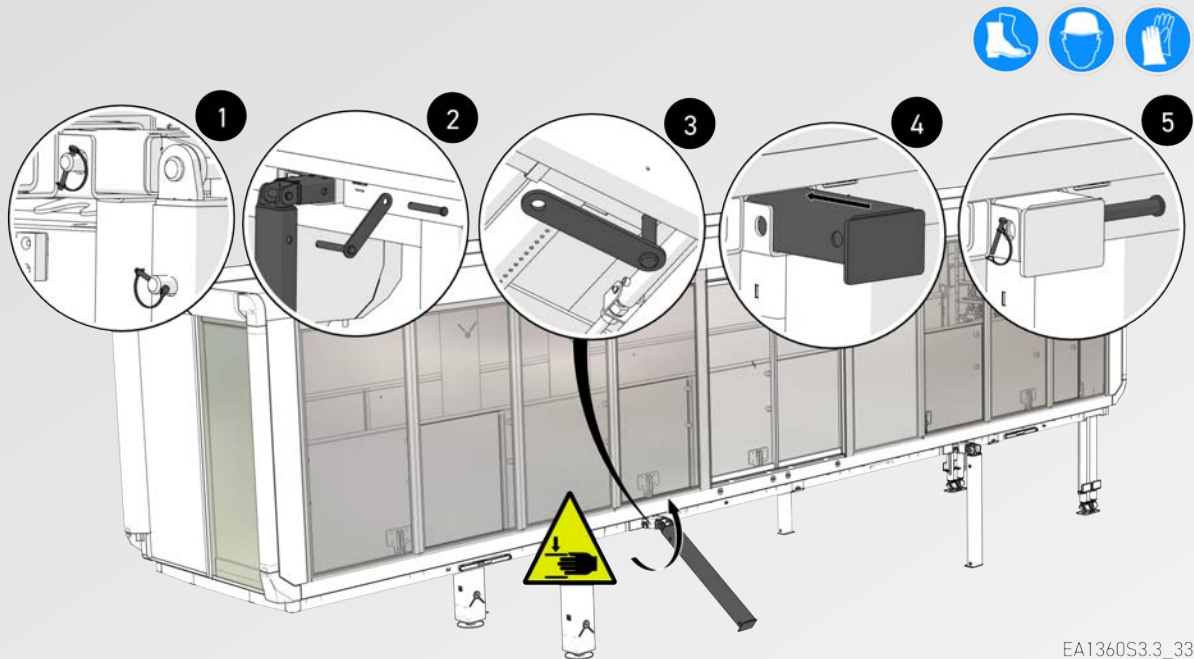

1. Fold, slide in and lock the 4 support legs one by one.



The locking brackets have to be stored under the chassis.

3.11 Lowering the container



Operating level cylinders separately

- Key 1 → FL container up
- Key 2 → FL container down
- Key 3 → FR container up
- Key 4 → FR container down
- Key 5 → RL container up
- Key 6 → RL container down
- Key 7 → RR container up
- Key 8 → RR container down
- Key 9 → Container up
- Key 10 → Container down

1. Fully lower the container by pressing and holding key **10** on the remote control.
(Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container



**Always keep the container as level as possible.
Correct using the keys **1** to **8****

4. Leveling the container



4.1 Extending the level cylinders



EA1360S3.3_11

Operating level cylinders separately

- Key 1 → FL level cylinder down
- Key 2 → FL level cylinder up
- Key 3 → FR level cylinder down
- Key 4 → FR level cylinder up
- Key 5 → RL level cylinder down
- Key 6 → RL level cylinder up
- Key 7 → RR level cylinders down
- Key 8 → RR level cylinders up
- Key 9 → All level cylinders down
- Key 10 → All level cylinders up

1. Slide the level cylinders out one by one until they touch the ground by pressing and holding keys **1**, **3**, **5** or **7** on the remote control.
(Push the key "START" + "1" simultaneously to activate key 1 to 14 when it is not active).



Keep a safe distance from the container and check that there are no persons or animals in the immediate vicinity of the container



Take the correct operators position as shown for the sake of proper orientation (Front Left (FL), Front right (FR), Rear Left (RL) and Rear Right (RR)).

4.2 Container leveling



Operating level cylinders separately

- Key 1 → FL level cylinder down
- Key 2 → FL level cylinder up
- Key 3 → FR level cylinder down
- Key 4 → FR level cylinder up
- Key 5 → RL level cylinder down
- Key 6 → RL level cylinder up
- Key 7 → RR level cylinders down
- Key 8 → RR level cylinders up
- Key 9 → All level cylinders down
- Key 10 → All level cylinders up

1. Press and hold key 11 until you hear the buzzer tone.



Retract the level cylinders by pressing key 10 should for some reason leveling fail. Then repeat the leveling procedure as given.



Spirit levels are not required.

4.3 Sliding out auxiliary cylinder piston rods



EA1360S3.3_13

Operating level cylinders separately

- Key 1 → FL level cylinder down
- Key 2 → FL level cylinder up
- Key 3 → FR level cylinder down
- Key 4 → FR level cylinder up
- Key 5 → RL level cylinder down
- Key 6 → RL level cylinder up
- Key 7 → RR level cylinders down
- Key 8 → RR level cylinders up
- Key 9 → All level cylinders down
- Key 10 → All level cylinders up


1. Slide out the piston rods from the auxiliary cylinders one by one using key 13 and 14.



As soon as a piston rod touches the ground the piston rod movement stops automatically.

Notes

Notes

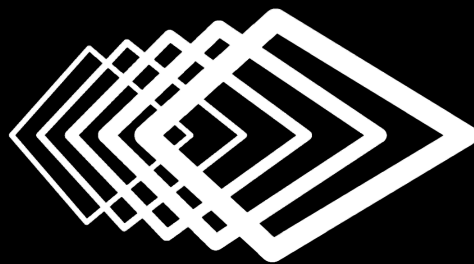

EXPANDABLE

movable spaces

Expandable b.v.

5521DZ Eersel

Netherlands

info@expandable.nl