

Instruction & Maintenance



EXPANDABLE
movable spaces




Instruction & Maintenance


Activation 1 - 10
Press and hold



Activation 11 - 20
Press and hold

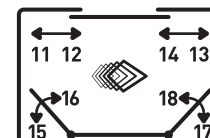


Expandable EA 765 S3

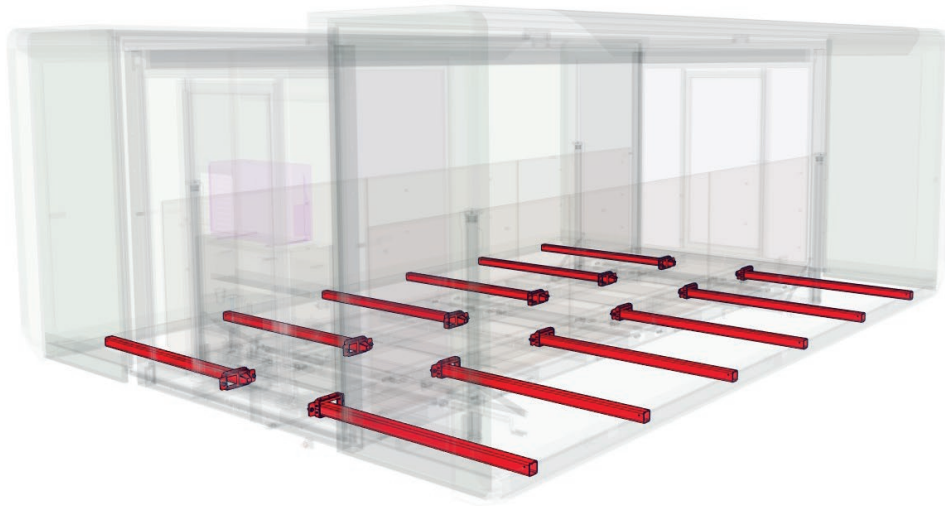


Maintenance Parts


Lubricate horizontal Top and bottom surfaces Of sliding beams PTFE only!

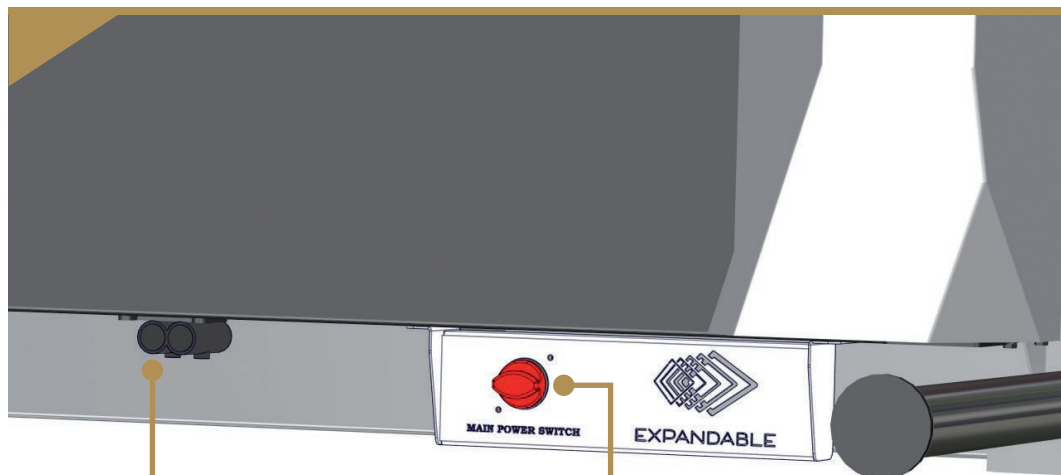



Jumpstart + Charge Connector 24 V


Main Power Switch 24 V System

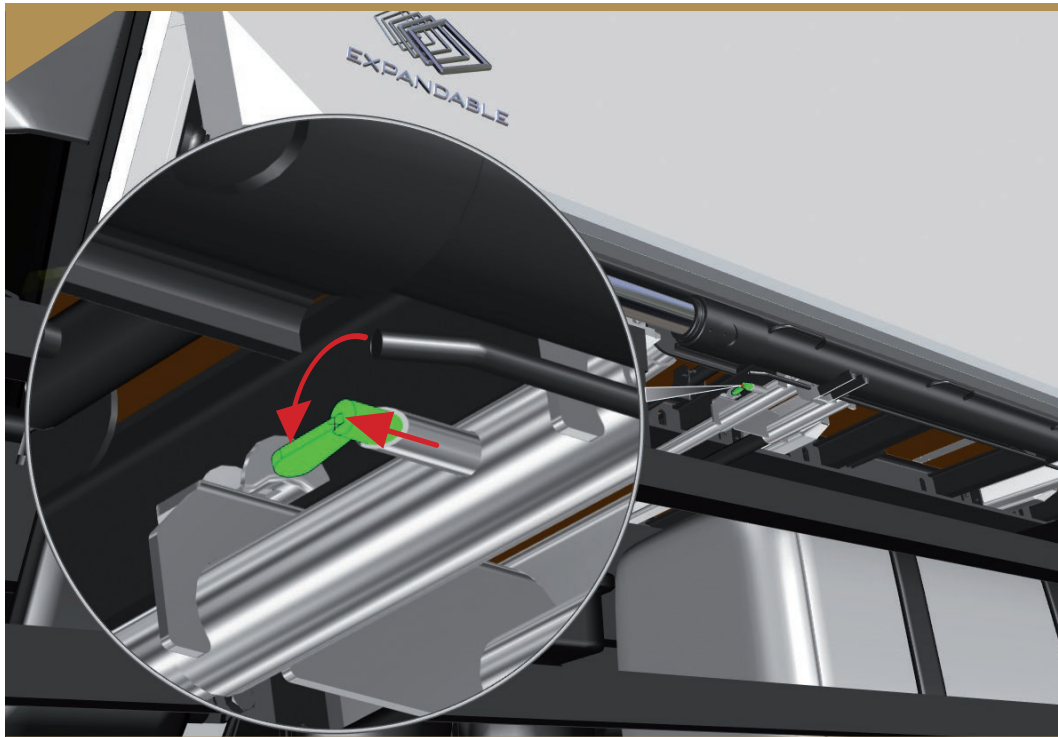


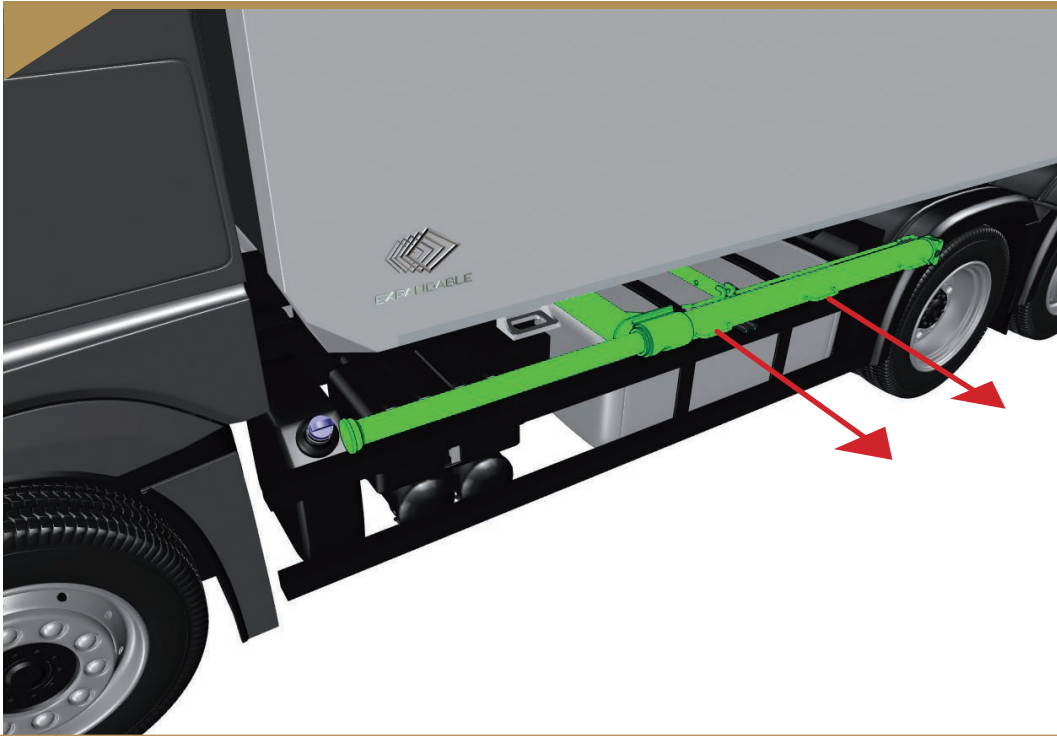

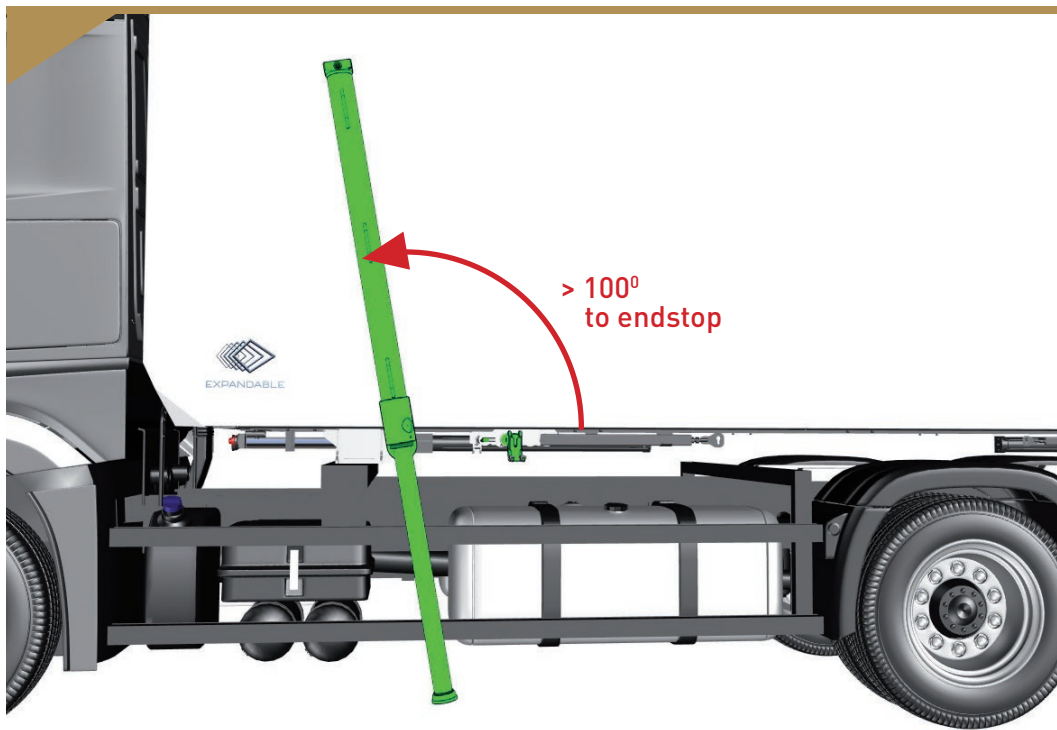


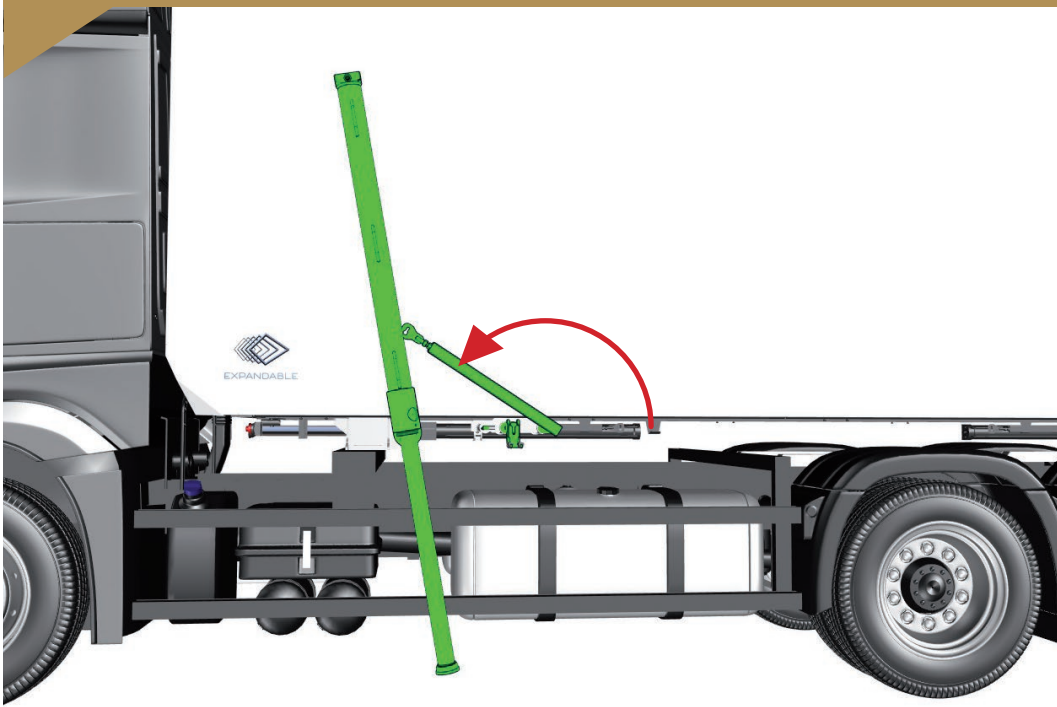


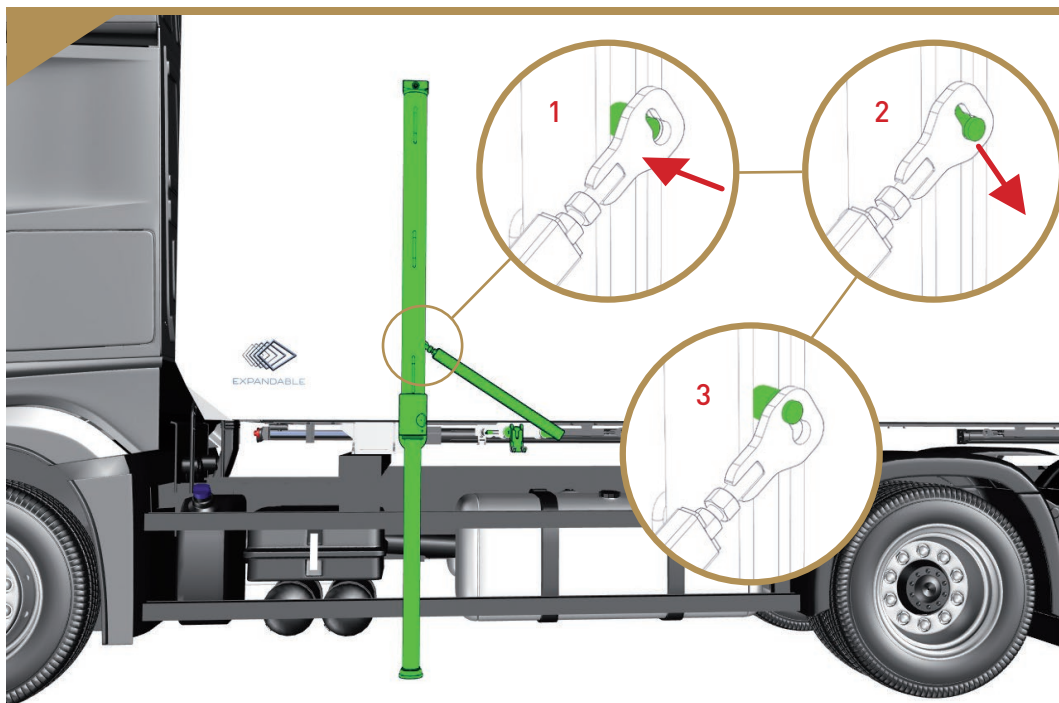


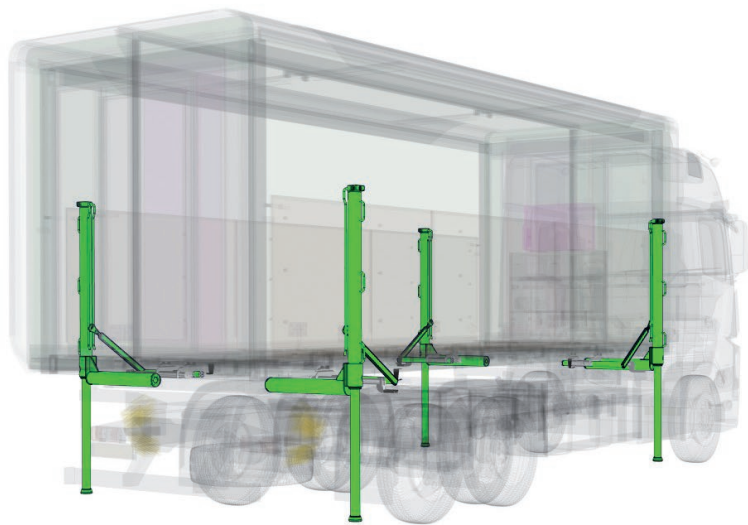

4x

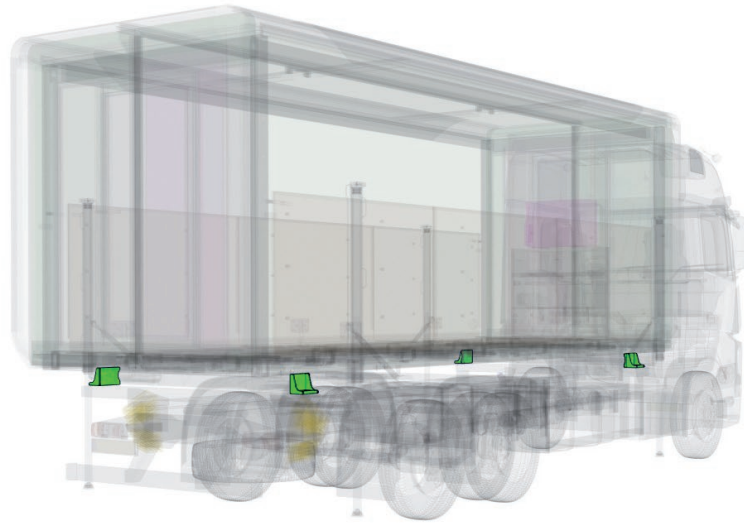


Unlock Twistlocks

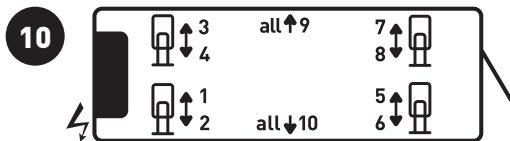
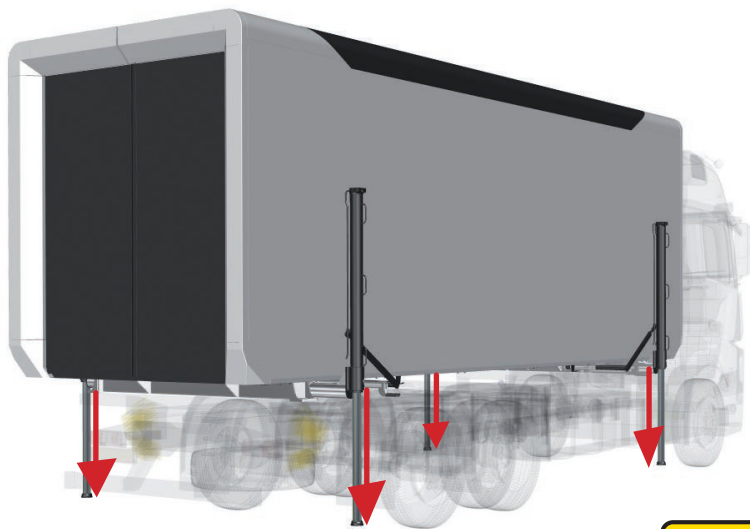





Lift unit separated from truck

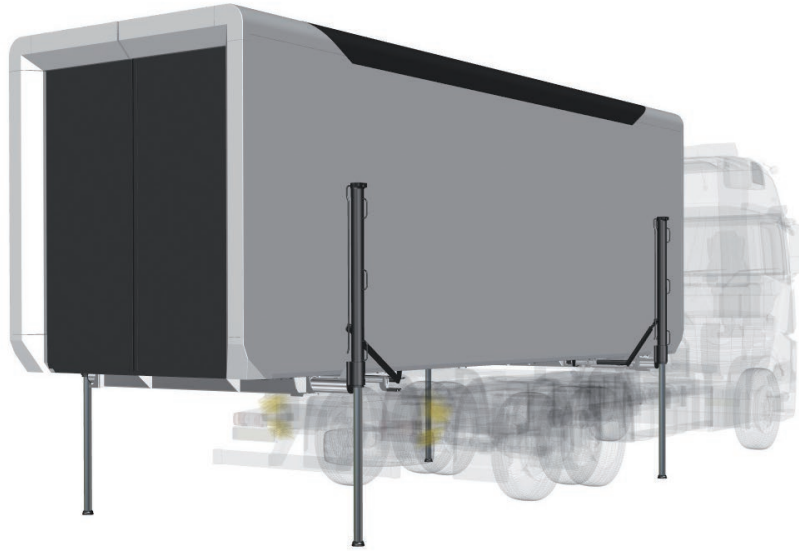


Slowly drive truck away

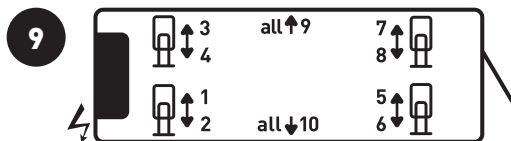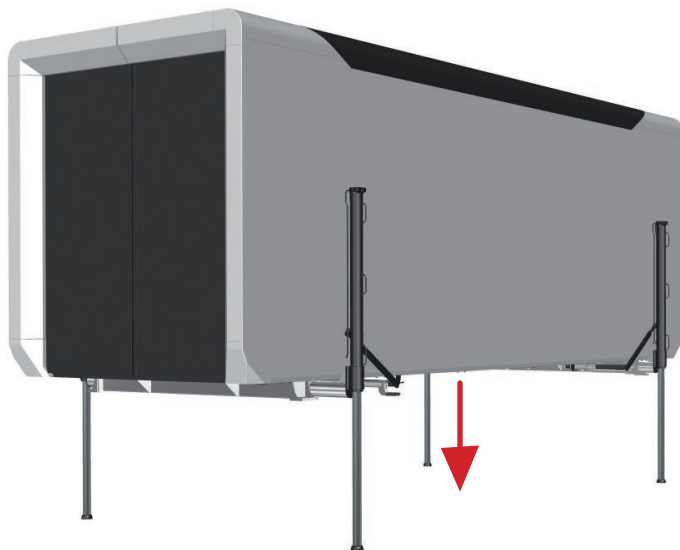

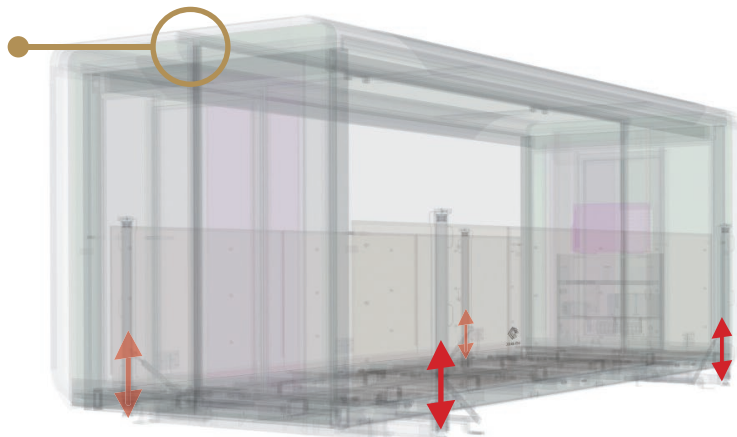


1 UP TO 8




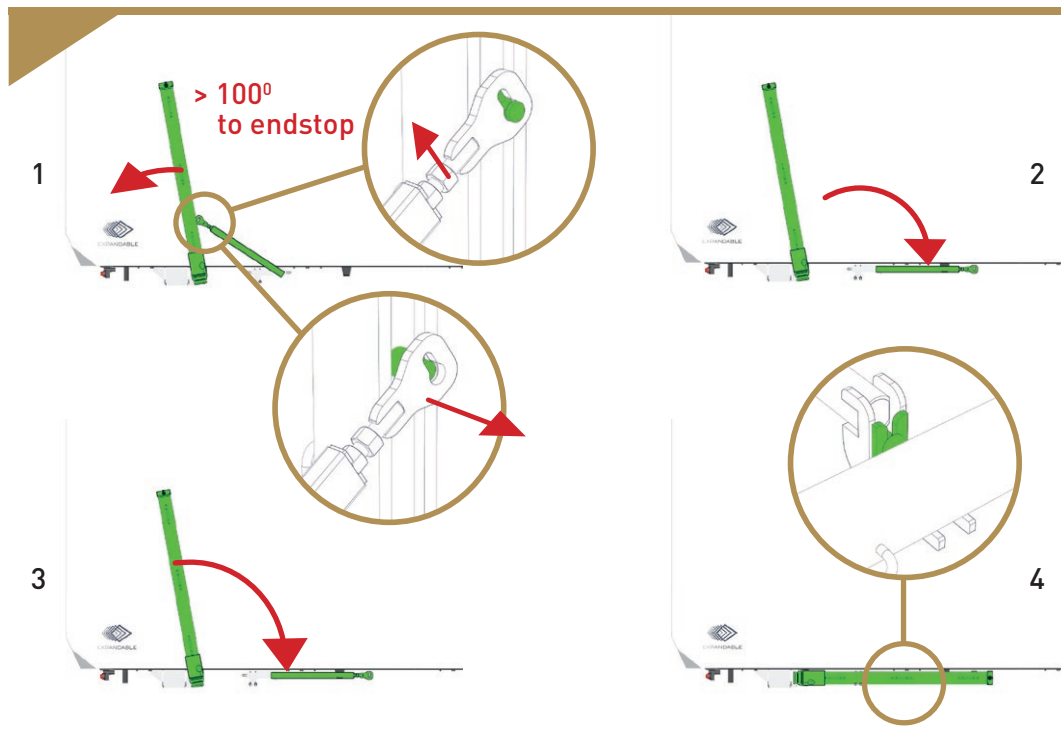


4x

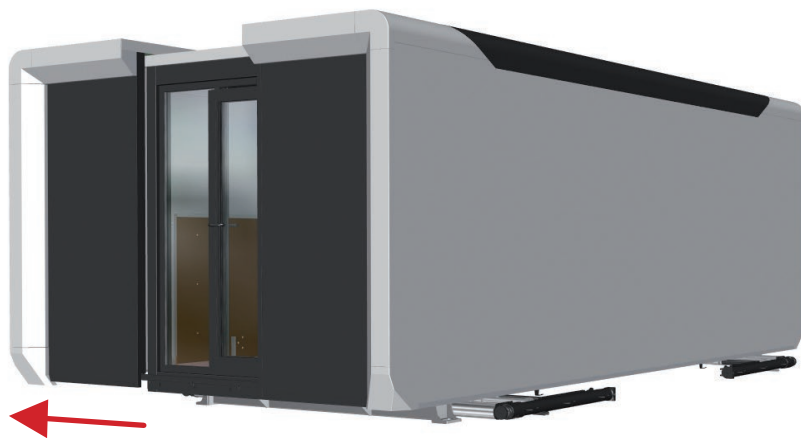



11

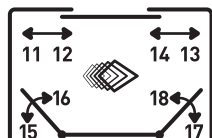

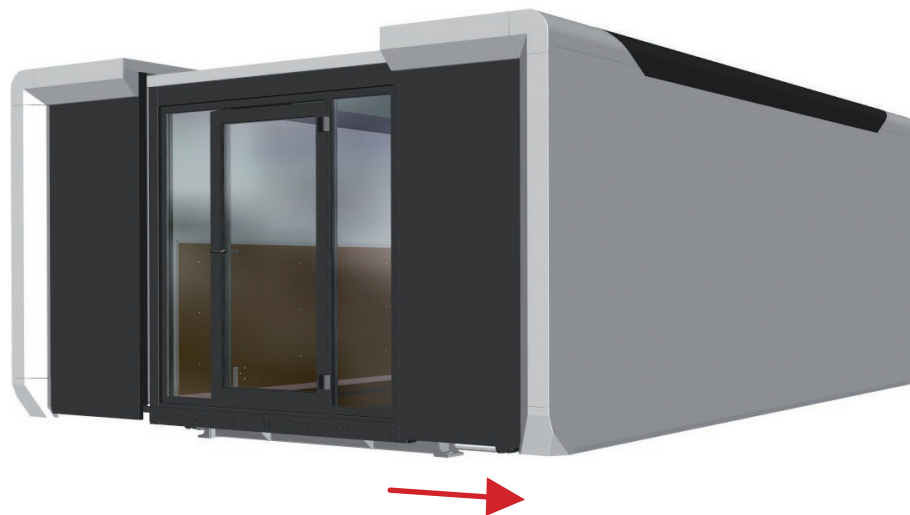


13

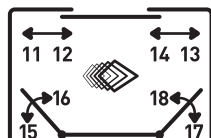

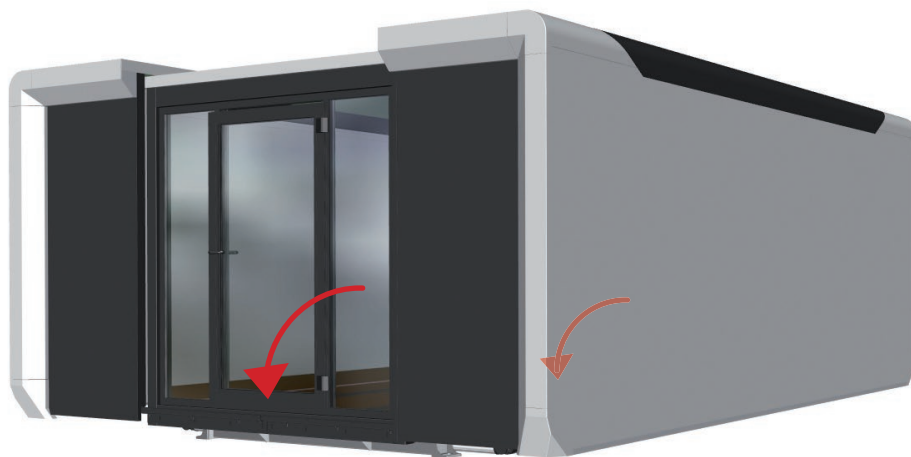



15

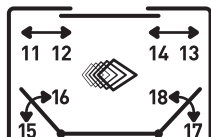



17

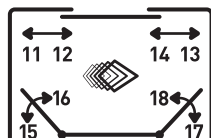


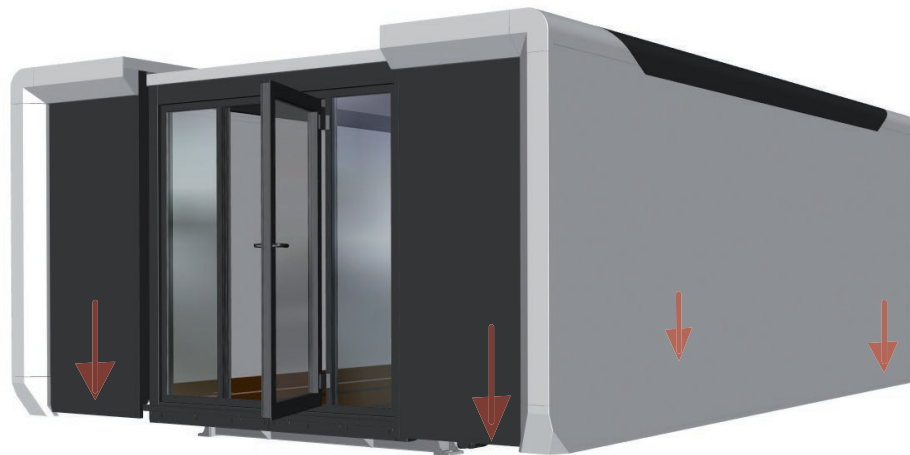

Manually place corner floor parts

PREPARATION FOR TRANSPORT


- Make sure segment floors can rotate without obstruction
- Secure freight on central fixed floor
- Close and lock all doors

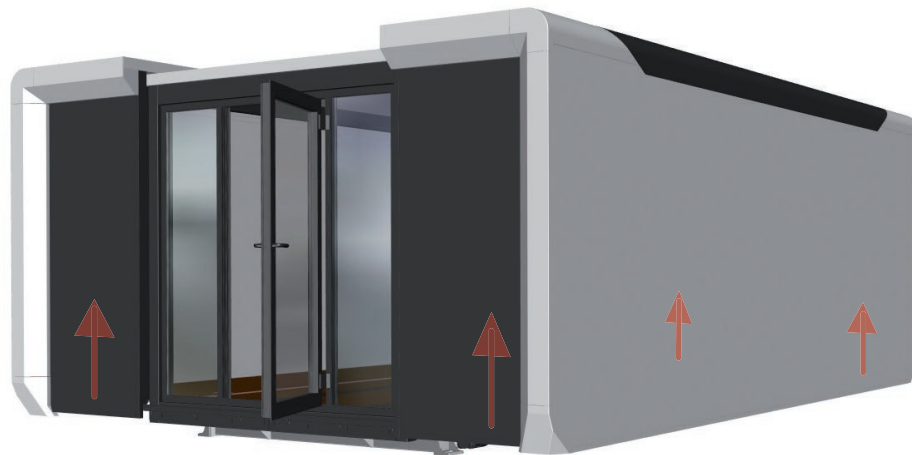


Manually remove corner floor parts




16 + **18**

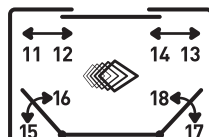


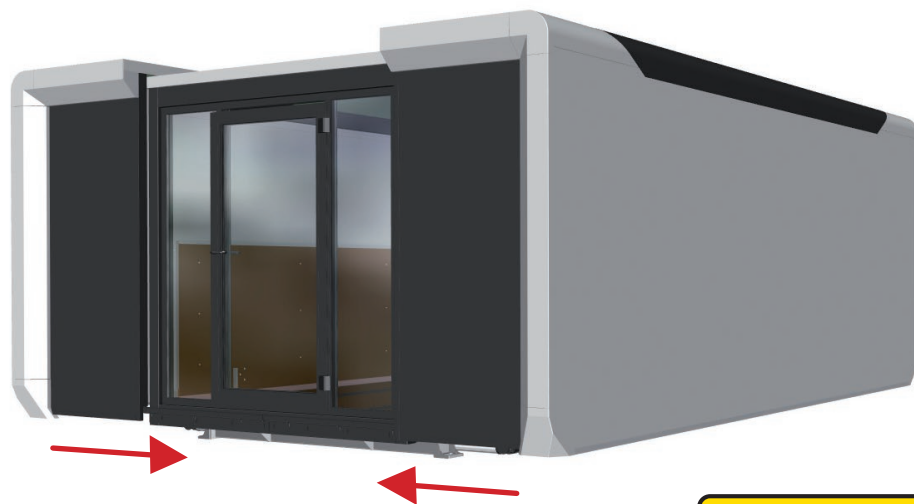



12 + 14

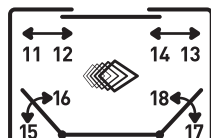




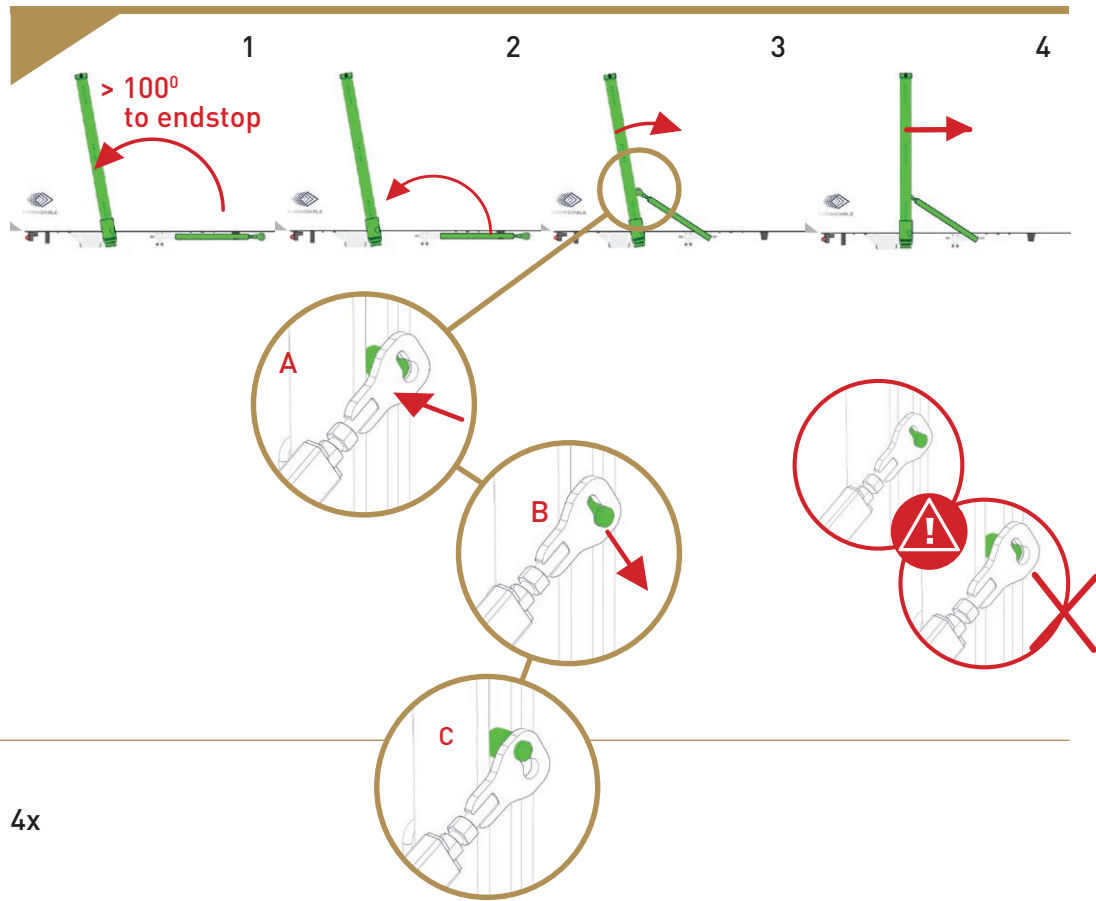


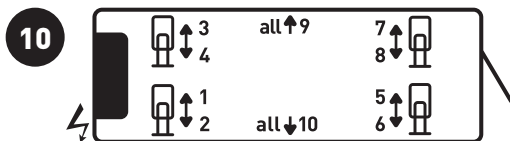


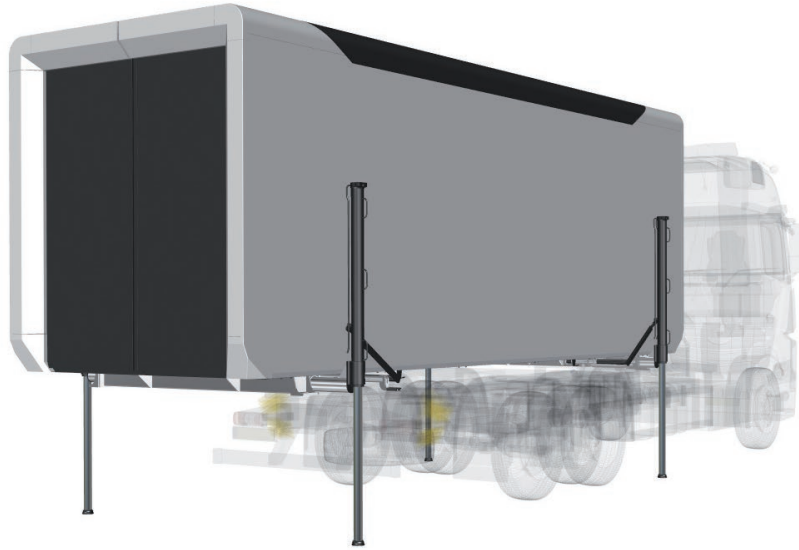



Slowly position truck align twislocks

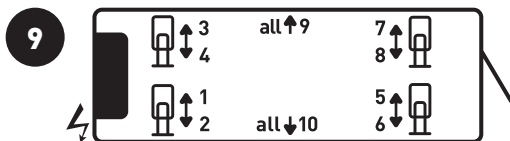

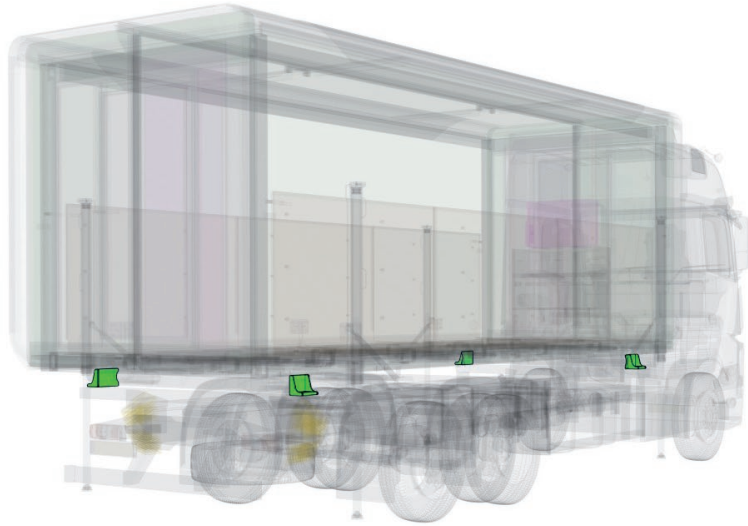


Lock Twistlocks

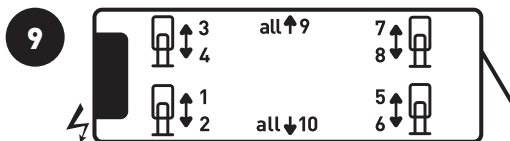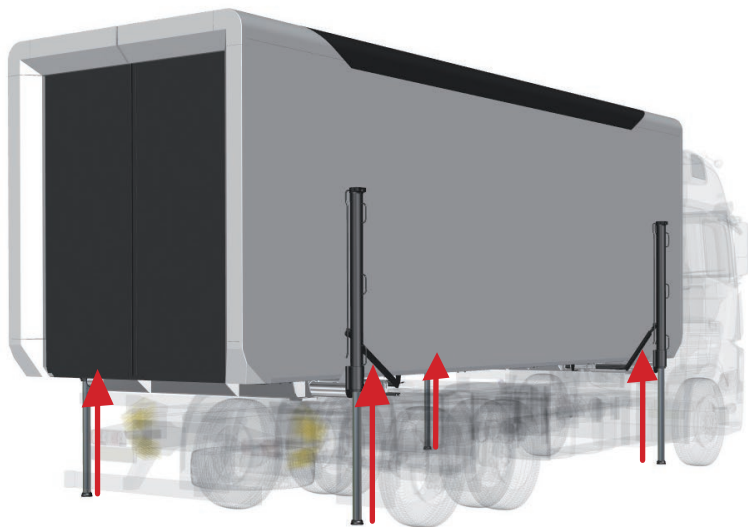


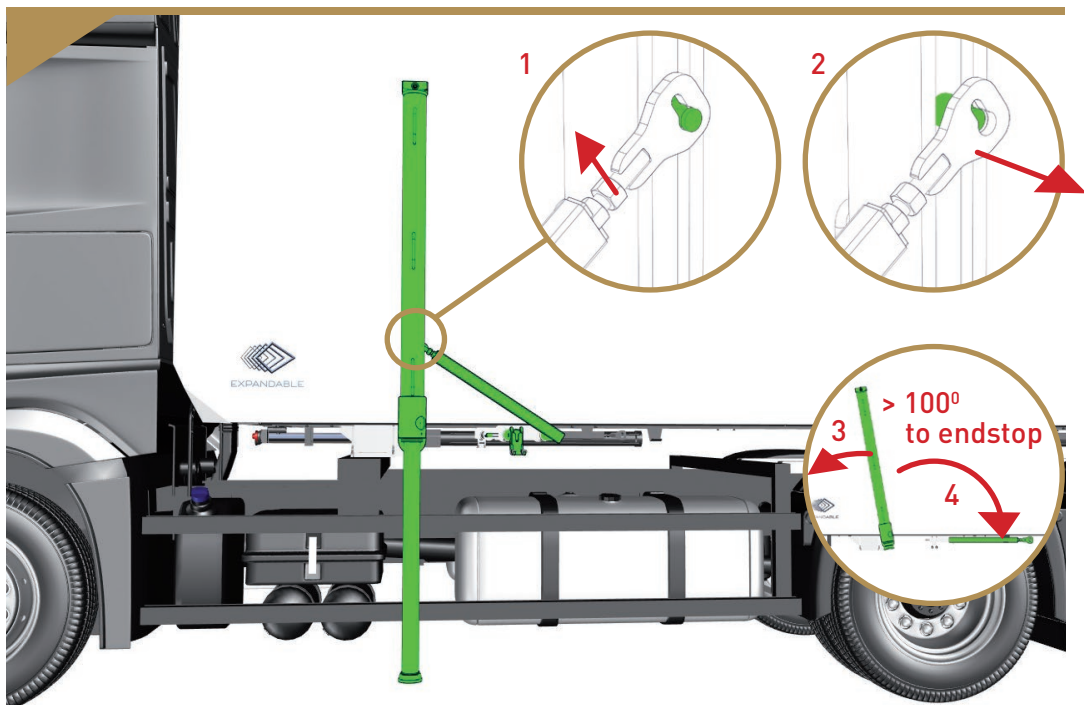


4x

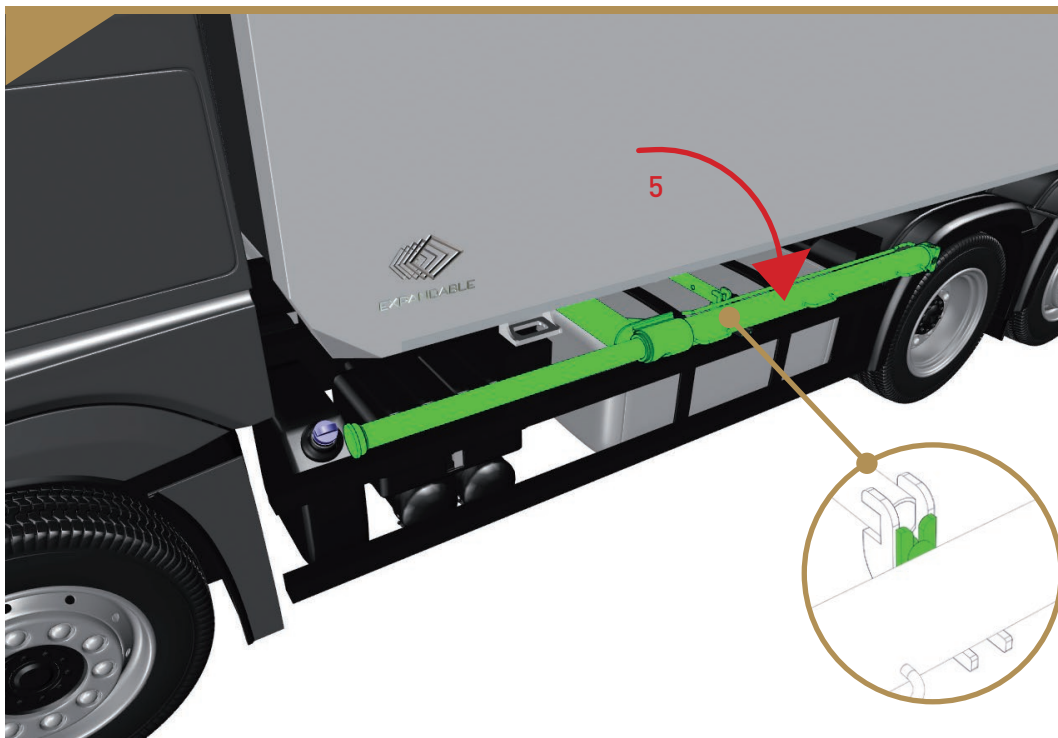

4x

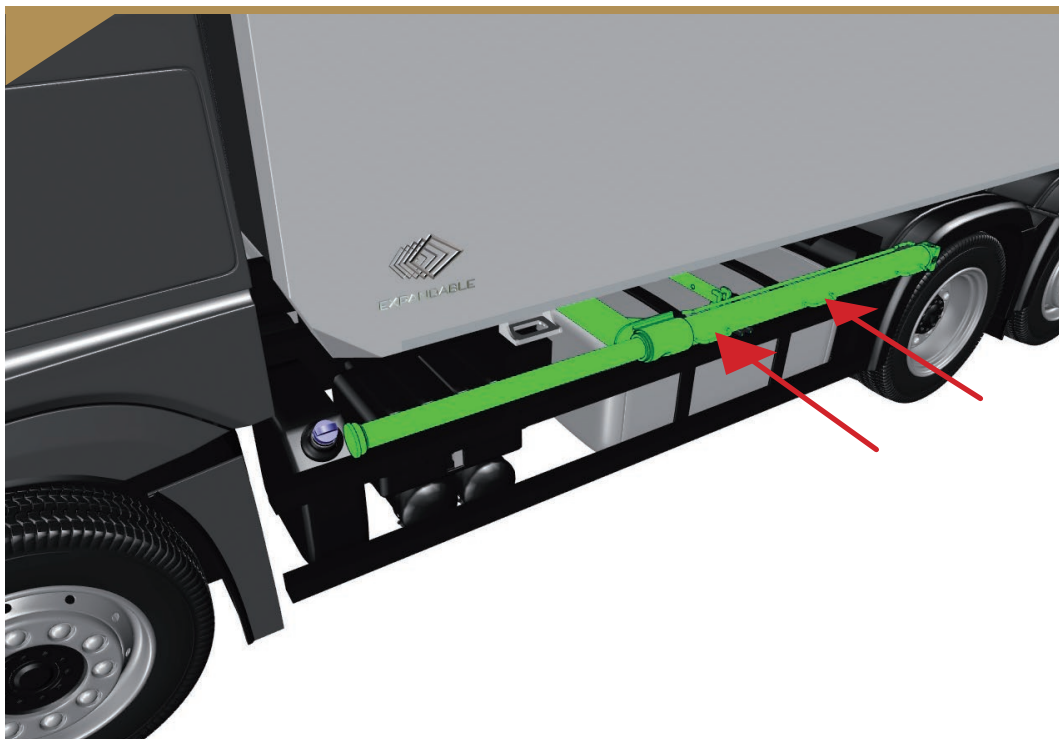

4x

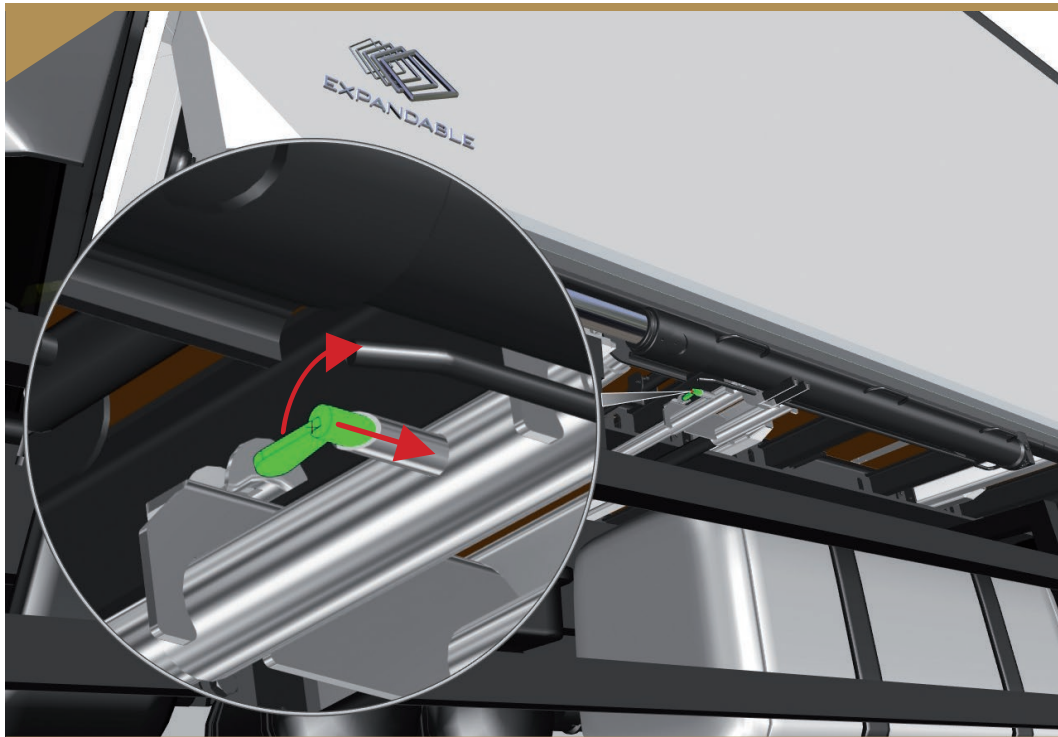



EXPANDABLE



EXPANDABLE