



EXPANDABLE
movable spaces


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

| Installing the corridor

APPLICABLE TO

Expandable Touchdown 44ft

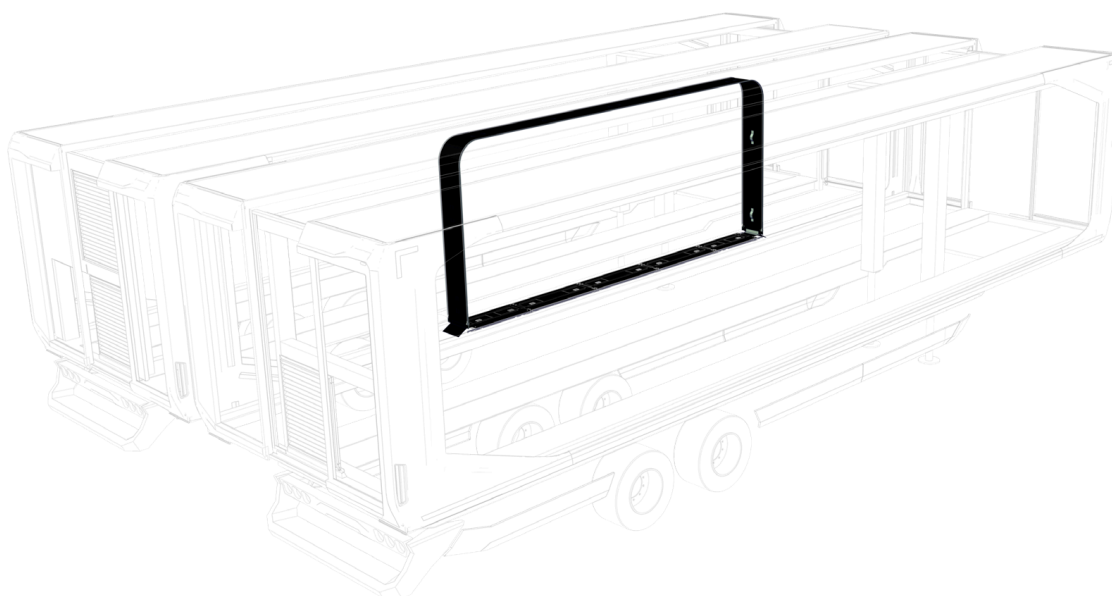

W-3070 O_00

1. Installing the corridor

This instruction applies to EO3 type trailers. Follow the procedure below to install the corridor between the trailers.


REQUIRED MATERIALS

Supports, floor elements, tarpaulin, tape measure.

BEFORE YOU START


Consult the user manual of your EXPANDABLE.

- 1 Position the trailers, in transport position, parallel to each other, at the distance indicated.

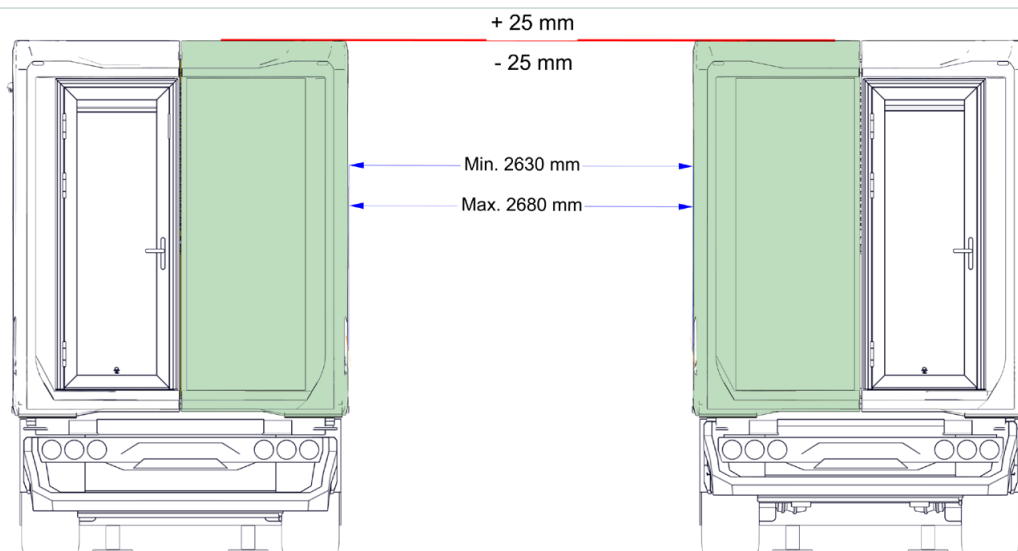

W-3070 O_01

- 2 Fully extend the sliding sections indicated and check the dimensions indicated.

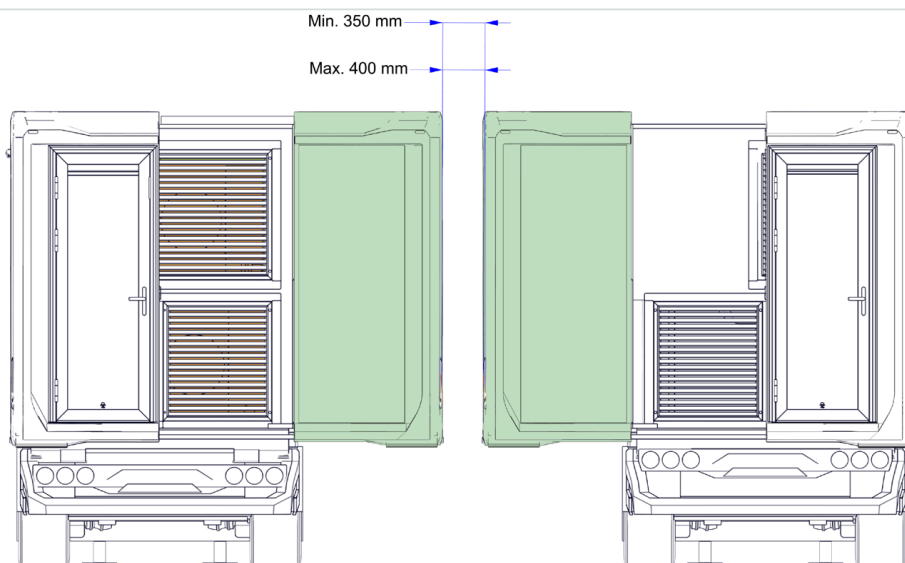

W-3070 O_03


1. Installing the corridor (continued)

- 3 The semi-trailers may be offset by a maximum of 50 mm relative to each other in the longitudinal direction.



W-3070 O_04


- 4 Lower the upper section of the trailer as far as possible. Consult the user manual.

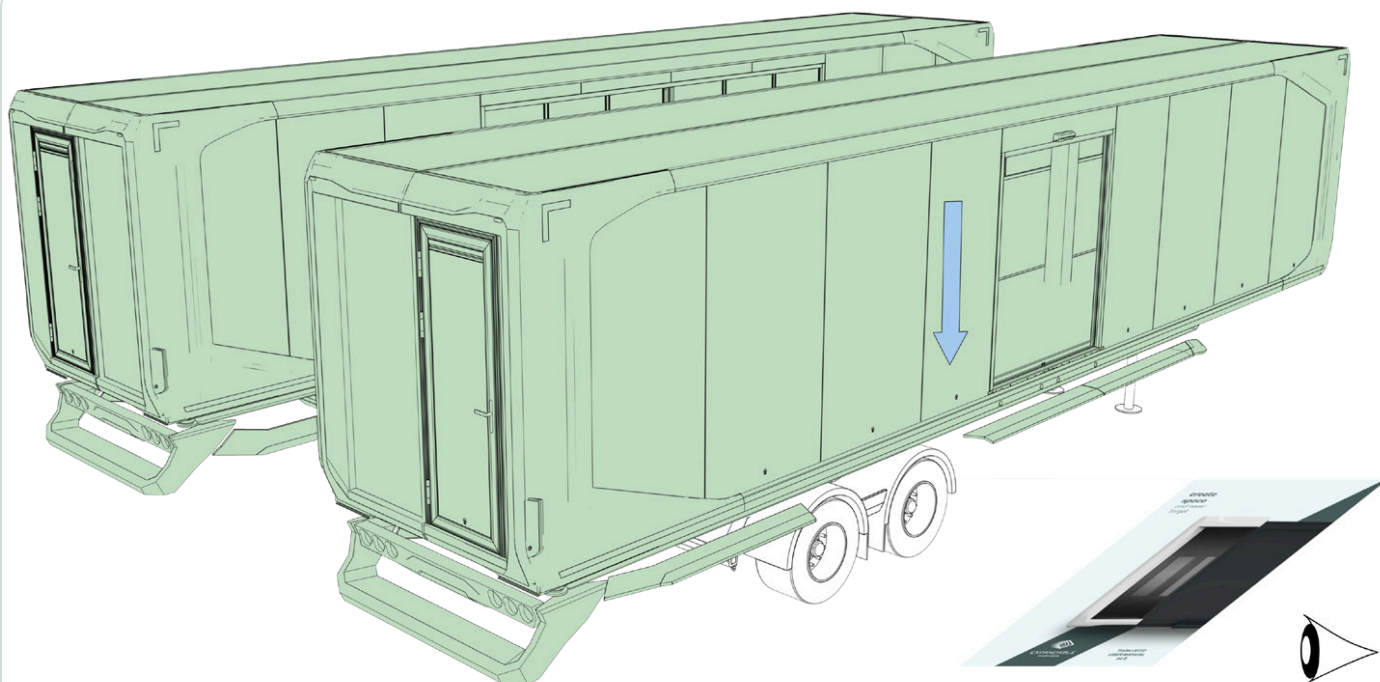


W-3070 O_02

1. Installing the corridor (continued)

- 5 Fit the connecting corridor supports and lock them.

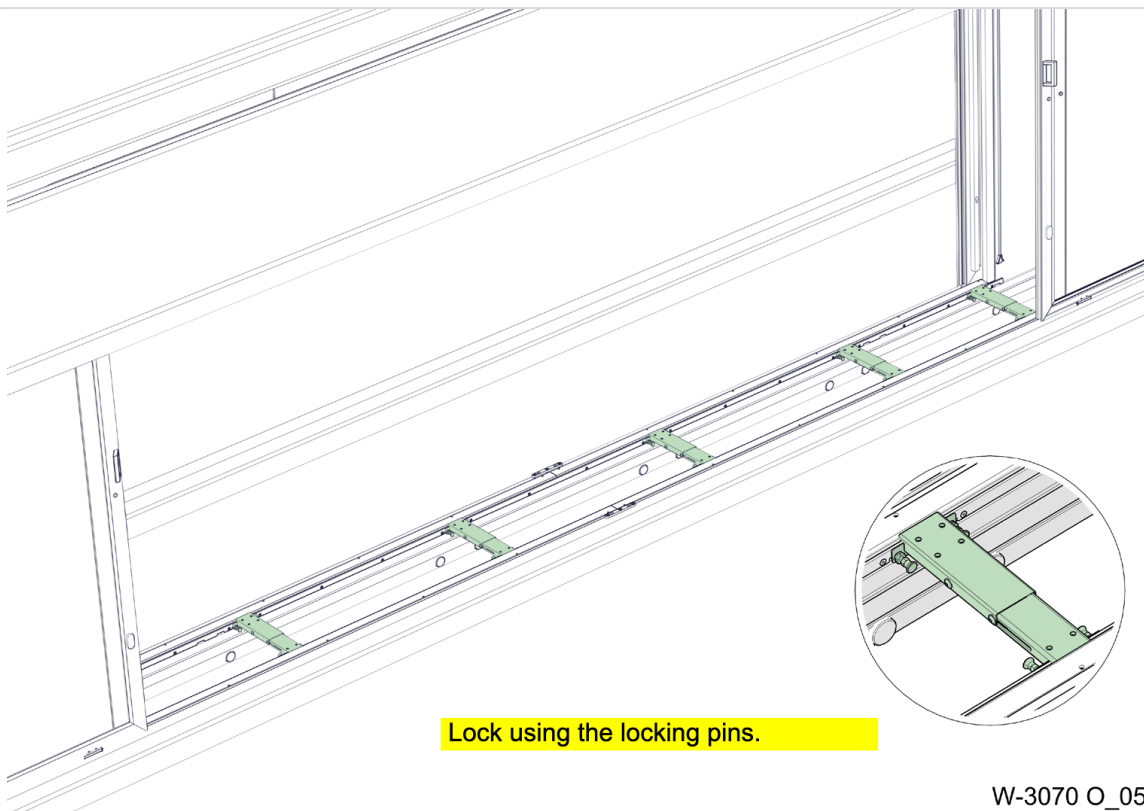


- 6 Fit the floor elements and screw them into place.

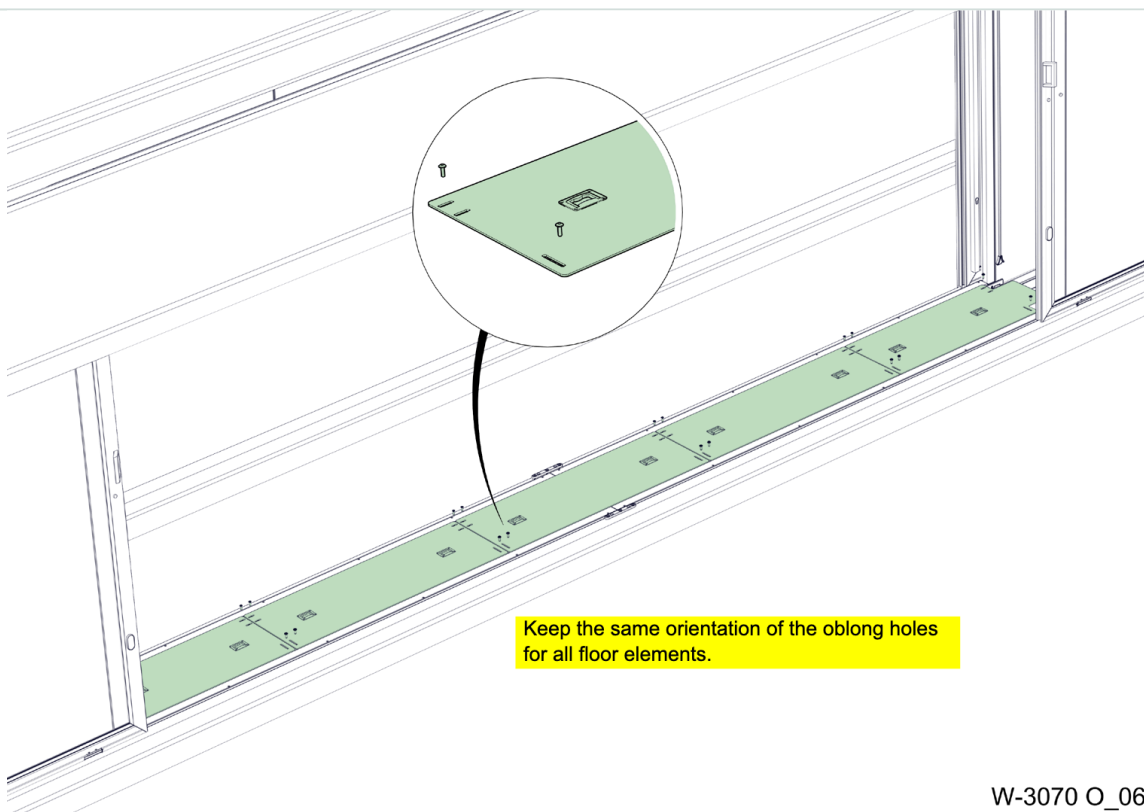

1. Installing the corridor (continued)

7

Slide the tarpaulin into the keder profile.

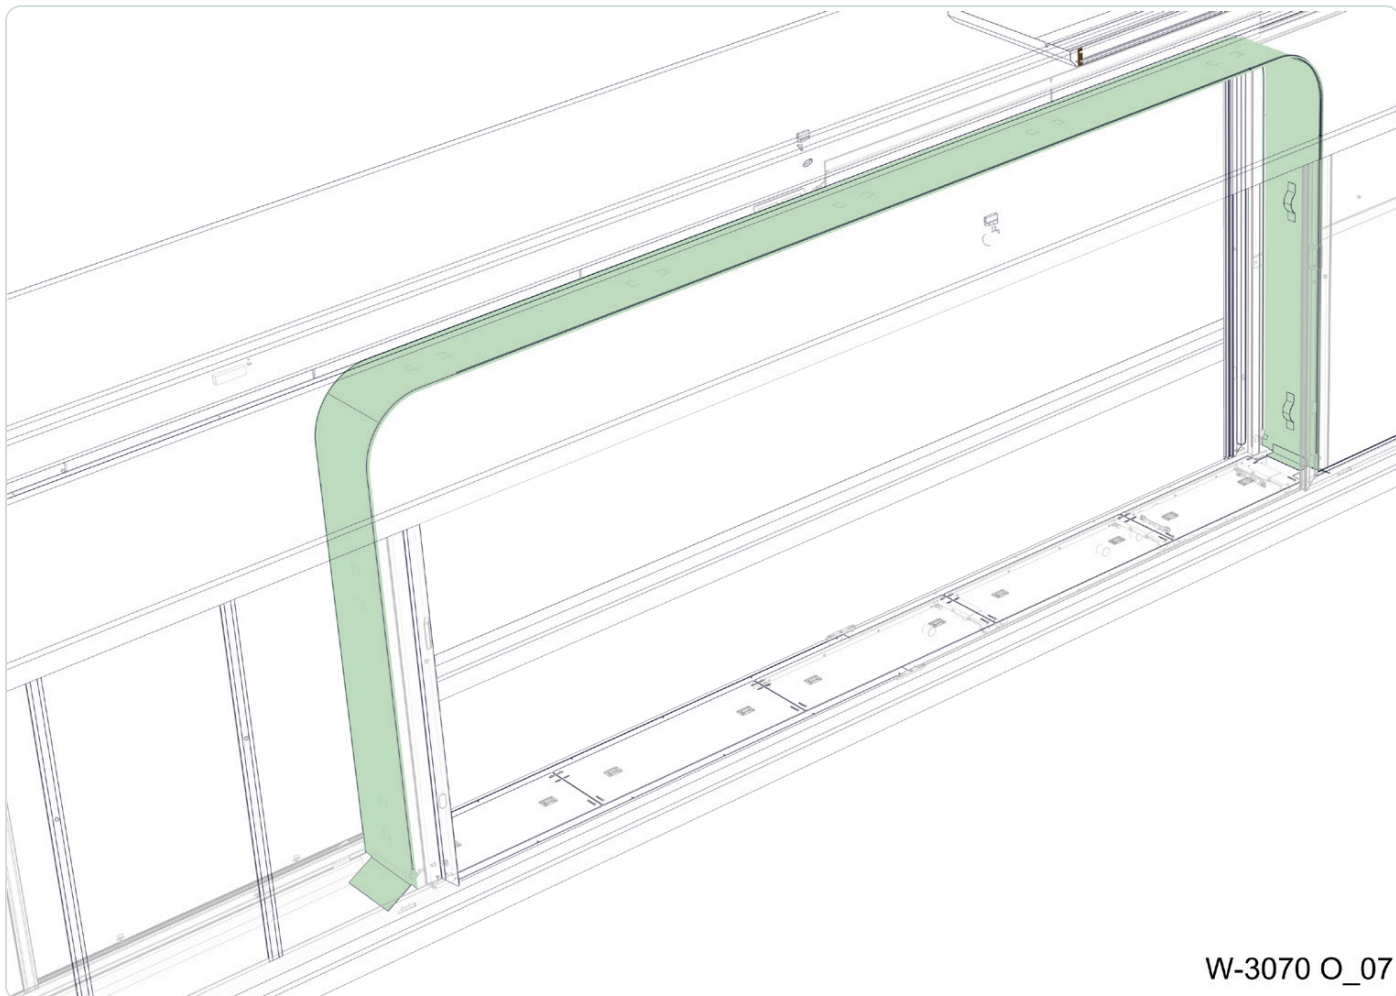

W-3070 O_07

Any questions?

Contact us

Expandable B.V.

Meerheide 25

5521 DZ Eersel

The Netherlands

+31 (0)85 890 21 88

info@expandable.nl

www.expandable-trailers.com