



Instruction system won't start

Type Relay

Schneider RMNF22TB3

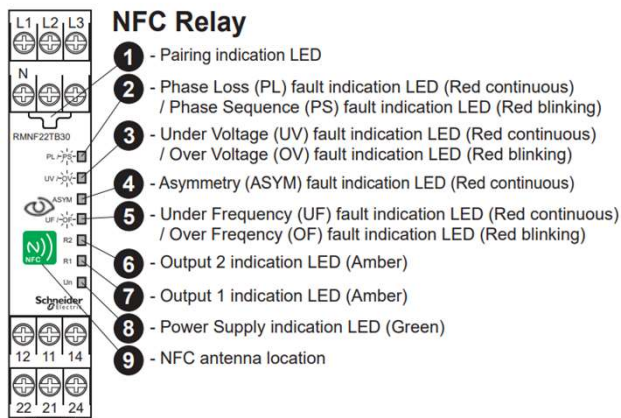

Finder 70.42.8.400.2032

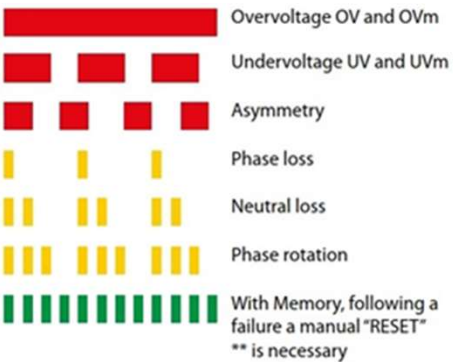

Indicator 2 (PL/PS) Red

Change phase in CEE connector



Indicator Green: OK

Indicator 3 (UV/OV) Red

Continuous

Check undervoltage

Blinking

Check overvoltage

Settings:
Overvoltage: 10%
Undervoltage: 10%

Indicator 4 (ASYM) /
Indicator 5 (UF/OF) Red

Check
Power supply

Indicator 1 Red

Continuous

Check
overvoltage

Blink 2X

Check
undervoltage

Blink 3X

Check
Phase
Power supply

Settings:
Overvoltage: 10%
Undervoltage: 10%

Indicator 2 Yellow

Blink 1X

Check phase

Blink 2X

Check Neutral

Blink 3X

Change phase in
CEE connector




Indicator Green: OK

1. Install application

Step (1): Turn On NFC feature on mobile device

- Go to phone setting or use phone shortcut to turn On the NFC feature.
- Different phone model might have different GUI design to turn On NFC feature.

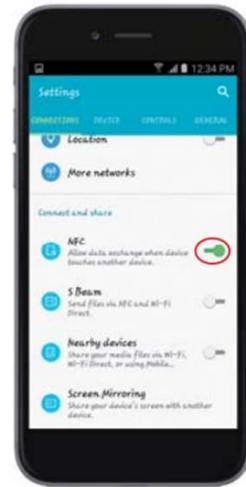

Step (2): Locate the position of the NFC antenna of your mobile phone


- The NFC antenna is usually located at the back of your phone. Place the phone around the product front face and adjust until the “pairing LED” is lit-up.




Note: Beware that some phone models have NFC antenna built in the battery. If you are changing your original battery to 3rd party battery, your mobile device might lose the NFC capability.

Step (3): Install Zelio NFC App from Google store

- Follow the steps shown in page 1 to download the Zelio NFC App




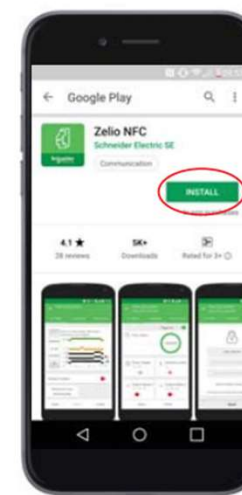


Step (4): After installing the Zelio NFC App, please register a user account to enjoy the product with enhanced features.

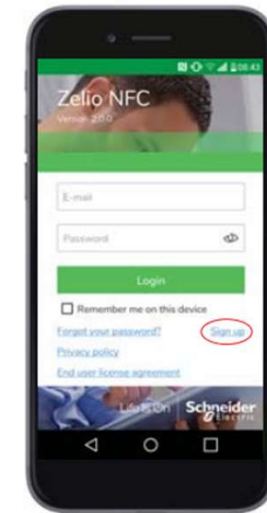

2. Manual configuration

Follow the steps to get to the manual configuration screen in the App.

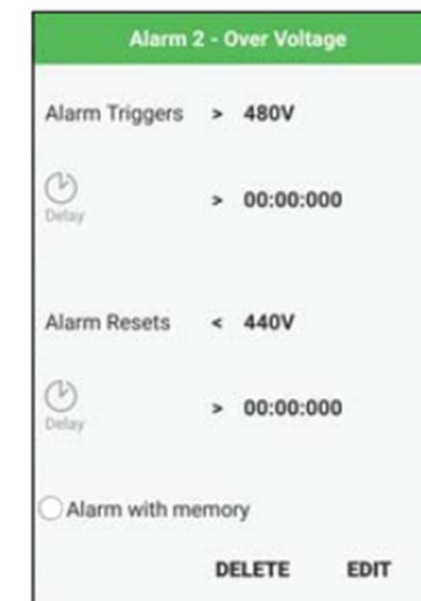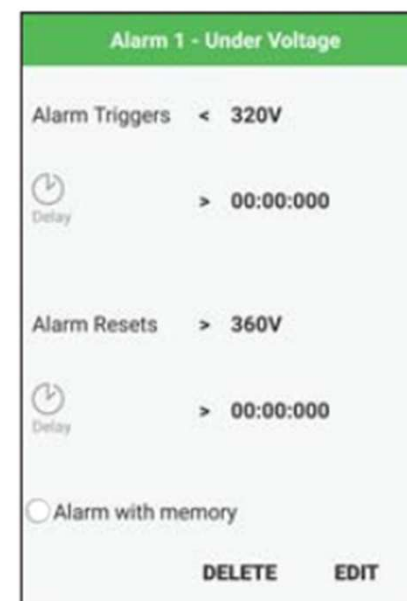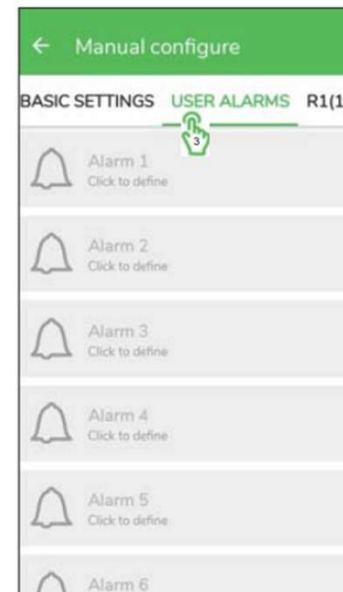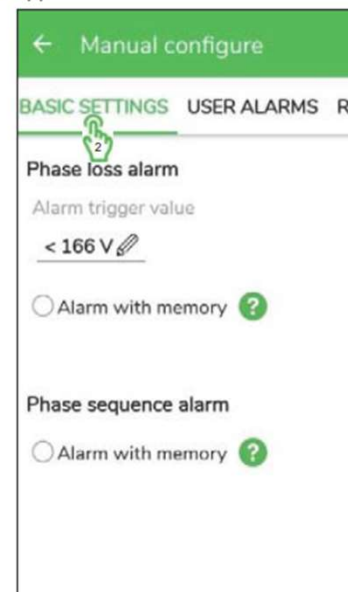

Settings:
Overvoltage: 10%
Undervoltage: 10%

[illegible]